



Celebrating 60 Years of Beautiful, Healthy Water

DA-20 Display Aerator Aerating Fountain

We at Scott Aerator thank you for your purchase. It is our goal to ensure that you are completely satisfied with your new Display Aerator and that it continues to operate smoothly for many years to come. Please take a few moments to read through this document for proper assembly, installation and maintenance to maximize the operating life of the unit.



This Kit Includes

- 1 - FLOAT PLATFORM
- 1 - MOTOR ASSEMBLY
- 1 - STAINLESS DEBRIS SHIELD
- 3 - SELF TAPPING SCREWS


Tools Needed

- ONE 3/8" WRENCH OR SOCKET SCREWDRIVER
- TWO 1/2" WRENCHES (OR PLIERS)




Assembly Instructions

1. Remove the two stainless steel bolts from the float. Fig. 1
2. Place motor assembly on end, propeller side facing up. Slip the float platform, with the Scott Aerator name and phone number facing up, over the motor assembly, aligning the two holes on the float platform to the pre-drilled holes on the motor assembly. Use the pre-drilled holes to fasten the float platform to the motor assembly, using the two stainless-steel bolts.
3. Turn the motor and float assembly over and place on its opposite end. Remove and discard the protective packaging and secure the stainless-steel filter basket by aligning the three filter holes to the pre-drilled holes on the motor assembly and securing with the enclosed self-tapping screws. Fig. 2
4. Secure a 3/8" or thicker nylon anchoring line (not provided) to each of the two attached eye bolts. Fig. 3
Make sure lines are long enough to extend outwards, 25 feet apart at a 45° angle to the pond or lake bottom. (See back page)
5. At this point, your Display Aerator can be floated into position in your pond or lake. Once a suitable location is determined, simply attach a boat anchor, concrete block, or similar weighted item to each of the two nylon lines (refer to next page for minimum anchor weight for your size aerator). Once attached, place the anchors at the bottom of the pond spaced a minimum of twenty-five feet apart.
6. The final step is to supply electric power to your Display Aerator, taking extra caution to **always use a ground fault circuit interrupter and a licensed electrical contractor**. See next page for guidelines on supplying power.

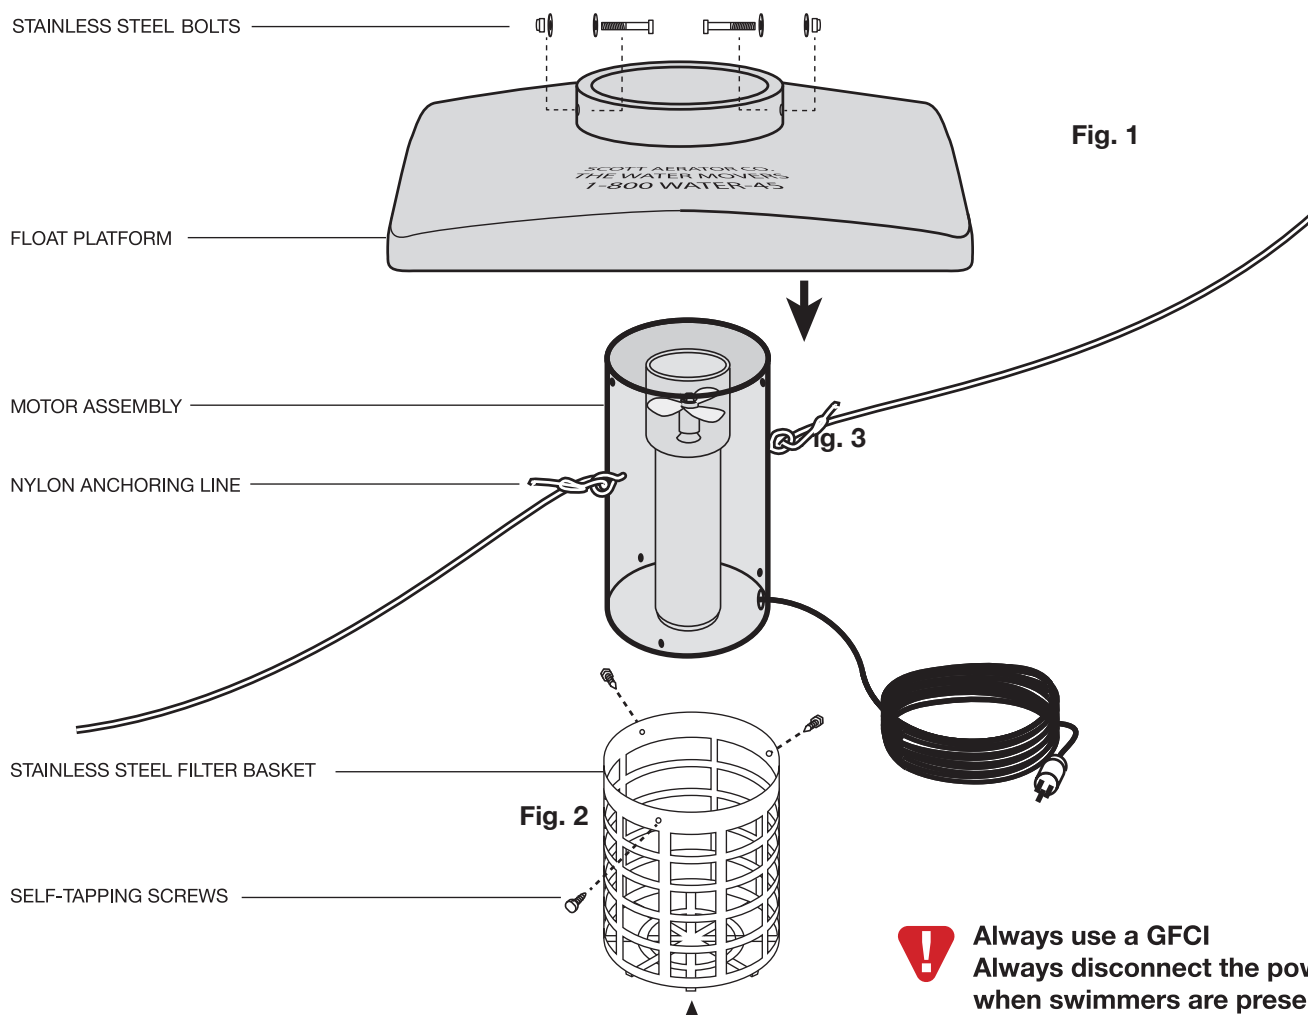

! Always use a GFCI
Always disconnect the power
when swimmers are present

! Do NOT use an extension cord
to supply power to the motor

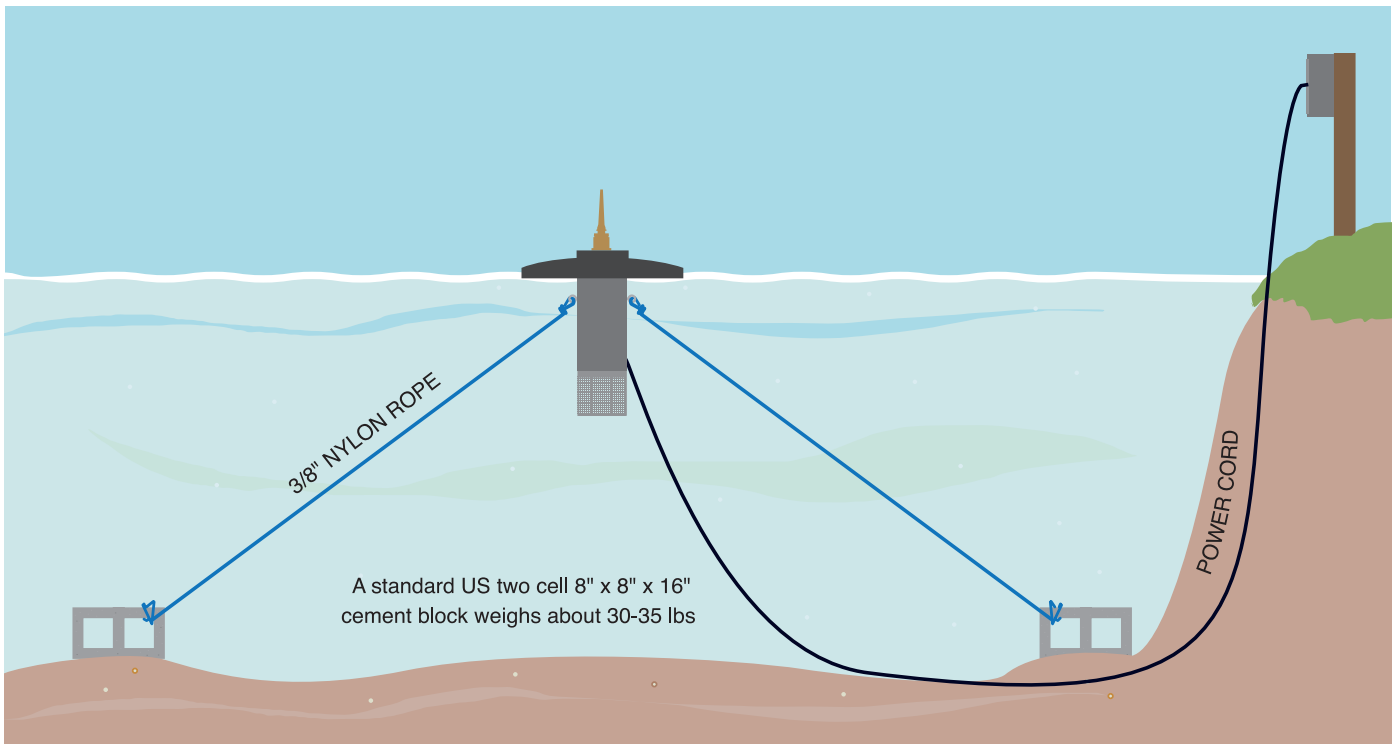

	1/3 HP 115V	1/3 HP 230V	1/2 HP 115V	1/2 HP 230V	3/4 HP 115V	3/4 HP 230V	1 HP 115V	1 HP 230V	1-½ HP 230V	2 HP 230V	3 HP 230V
KWs	.25	.25	.37	.37	.55	.55	.75	.75	1.1	1.5	2.2
AMPs	8	4	10	5	10.7	6.8	11.5	8.2	10.6	10	13.3
SPRAY HEIGHT	5'	5'	6.5'	6.5'	6.8	6.8'	7'	7'	10'	11'	11'
SPRAY DIA (FT)	18'	18'	22'	22'	23'	23'	25'	25'	25'	28'	30'
GALLONS/MIN	300	300	400	400	450	450	500	500	600	700	800
MIN ANCHOR WT (ea)	20 lbs	20 lbs	25 lbs	25 lbs	30 lbs	30 lbs	35 lbs	35 lbs	45 lbs	45 lbs	55 lbs

Refer to the chart left to determine the proper cable size and length for your particular motor. The maximum lengths listed are from the motor to the circuit breaker, not to the plug in. Improper wire size can cause unsafe operating conditions and damage the motor. **DO NOT use an extension cord to supply power to the motor** as this will put strain on and shorten the life of the motor.

MAXIMUM CABLE LENGTH IN FEET FROM MOTOR TO MAIN POWER

		1/3 HP 115V	1/3 HP 230V	1/2 HP 115V	1/2 HP 230V	3/4 HP 115V	3/4 HP 230V	1 HP 115V	1 HP 230V	1-½ HP 230V	2 HP 230V	3 HP 230V
CABLE SIZE	12 AWG	175'	700'	160'	650'	125'	480'	75'	400'	310'	250'	190'
	10 AWG	275'	1120'	250'	1020'	150'	760'	100'	630'	480'	390'	300'
	8 AWG	430'	1720'	390'	1610'	200'	1200'	150'	990'	770'	620'	470'
	6 AWG	680'	2680'	620'	2510'	350'	1870'	300'	1540'	1200'	970'	750'
	4 AWG	1050'	4180'	960'	3880'	700'	2890'	650'	2380'	1870'	1530'	1190'
	2 AWG	1600'	6320'	1460'	5880'	1100'	4370'	1050'	3610'	2850'	2360'	1850'
	CABLE SUPPLIED	70' 12 GA	70' 12 GA	70' 12 GA	70' 12 GA	70' 10 GA	70' 12 GA	70' 10 GA	70' 12 GA	100' 12 GA	100' 10 GA	100' 10 GA

Maintaining your DA-20 Display Aerator


Most of our products require very little to any maintenance. Under normal operating conditions, you should enjoy many years of trouble free service from the unit. As a rule of thumb, the propeller assembly on our aerator fountains should be changed every five years. This is a simple procedure that can be done on-site. Refer to Fig. 4 for replacement parts. Anchoring ropes, depending on type, will deteriorate over time. These too should be replaced every five years if quality nylon rope (3/8" or thicker) is utilized. When the unit is removed from the water for the propeller and rope switch, it would be a good opportunity to wash the unit down with high pressure water. Once the unit is clean, a visual inspection of the entire aerator is recommended to be certain nothing is restricting water flow.

The Scott Aerator Company has engineered all of its water features to eliminate the need for time consuming and costly winterizing products and procedures. **Removing the Aerator from the water each winter will dry out and potentially damage the motor seals.** Simply leave your aerator in the water, turn the power supply off, and forget about it for the winter. Once the water thaws in the spring, re-establish power to the unit and you're good to go. All of the components will withstand sub-zero conditions without damage.

To find the cost to run one item:

1. Total up the watts per day for the item to get total watts/day.
2. Divide total watts/day by 1000 to get the total kilowatt hours (kWh) per day.
3. Multiply the kWh/day times the cost per kWh to get cost/day.
4. To find out the average cost per month, multiply the cost/day by 30.
(Power company monthly billing cycles vary from 28-33 days)

Fig. 4

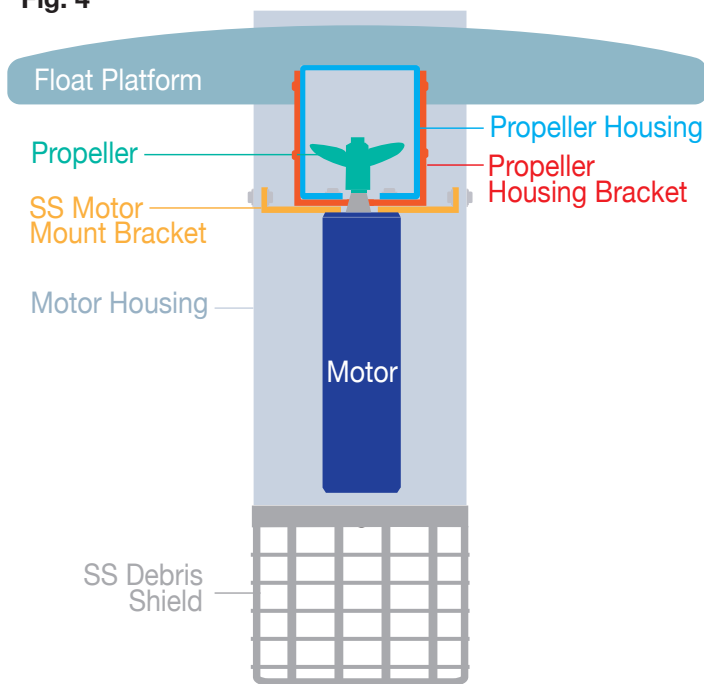

Part Number	Description
20037	Float Platform
20077.1	DA-20 Propeller Housing - 1/3hp – 1hp
20077.2	DA-20 Propeller Housing - 1-1/2hp – 3hp
30006	DA-20, 1/2hp – 1hp Propeller
30008	DA-20, 1-1/2hp Propeller
30008.2	DA-20, 2hp Propeller
30008.3	DA-20, 3hp Propeller
14053	DA-20 1/3hp – 1hp Propeller Housing Bracket
14050	DA-20 1-1/2hp – 3hp Propeller Housing Bracket
20115	S/S Motor Mount Bracket
20077	Grey Motor Housing (8" Dia x Required Length)
20045	Debris Shield Basket
28113	Power Cord for 115v, 1/3hp & 1/2hp, Per Foot
28113	Power Cord for 230v, 1/3hp – 1-1/2hp, Per Foot
28112	Power Cord for 115v, 3/4hp & 1hp, Per Foot
28111.5	Power Cord for 230v, 2hp – 3hp, Per Foot
20001.3	Motor, 1/3hp 115v
20001.32	Motor, 1/3hp 230v
20000	Motor, 1/2hp 115v
20002	Motor, 1/2hp 230v
20003.751	Motor, 3/4hp 115v
20003.75	Motor, 3/4hp 230v
20004.1	Motor, 1hp 115v
20004	Motor, 1hp 230v
20001	Motor, 1-1/2hp 230v
20006	Motor, 2hp 230v
20003.3	Motor, 3hp 230v

The Scott Aerator Awesome Warranty

All standard Scott Aerator products are unconditionally warranted for five years against motor defects in materials or workmanship, under normal operating conditions. All other product components are warranted for one year from date of purchase. Scott Aerator will repair or replace failed parts under warranty when the defective unit is returned to the factory, shipping prepaid, and factory inspection establishes that the part was defective. The unit must be returned to the factory prior to shipment of replacement parts. All parts replaced under this warranty will be returned with shipping prepaid. Scott Aerator will not be liable for consequential damage nor for any costs associated with removal or attempts to repair components in the field.



13245 Barry Street, Holland, MI 49424
 scottaerator.com information@scottaerator.com
 800-WATER-45 (800-928-3745) (616) 392-8882

