



RESIDENTIAL

# SK-IP-N

120V

INSTALLATION GUIDE | USER MANUAL





## UL Model “5K-120V/8K-230V-1P” INSTALL GUIDE AND OWNER’S MANUAL

<b>UPON RECEIVING SHIPMENT .....</b>	<b>4</b>
<b>SPEC SHEET .....</b>	<b>5</b>
<b>WIRE GAUGE GUIDE (COPPER).....</b>	<b>7</b>
<b>WIRING DIAGRAMS .....</b>	<b>8</b>
<b>PHYSICAL INSTALLATION .....</b>	<b>14</b>
INVERTER COMPONENTS.....	14
DECIDING BACKUP CIRCUITS.....	14
SINGLE SYSTEM INSTALLS .....	15
MOUNTING THE SOL-ARK .....	15
INTEGRATING BATTERIES (SOL-ARK POWERED "OFF").....	15
CONNECTING SOLAR PANELS .....	16
GRID   LOAD   GEN.....	16
INTEGRATING A GENERATOR .....	17
INTEGRATING SENSORS AND ACCESSORY PLACEMENT .....	18
POWERING-UP AND TESTING THE SOL-ARK 5K-1P-N .....	19
CHECK THE VOLTAGE ON EACH PV INPUT CIRCUIT .....	19
<b>WI-FI / INTERNET CONNECTION.....</b>	<b>20</b>
REMOTE MONITORING SETUP .....	20
IP ADDRESS SETUP INSTRUCTIONS (PC OR SMART PHONE) .....	23
<b>GUI SCREENS.....</b>	<b>25</b>
<b>PROGRAMMING GUIDE .....</b>	<b>27</b>
MAIN SCREENS (TOUCHSCREEN) .....	28
BASIC SETUP .....	29
SYSTEM ALARMS.....	30
BATTERY SETUP .....	30
GRID SETUP .....	32
<b>LIMITER SENSORS (CT SENSOR).....</b>	<b>35</b>
LIMITER SENSOR AUTOMATIC SETUP .....	36
<b>INSTALL TIPS .....</b>	<b>37</b>
OFF-GRID INSTALL TIPS .....	37
GRID-TIE / NO BATTERY INSTALL TIPS .....	37
<b>BATTERIES .....</b>	<b>38</b>
BATTERY CHARGING INFORMATION .....	38
MODBUS/RJ45 APPLICATION NOTE.....	41
<b>TROUBLESHOOTING GUIDE.....</b>	<b>42</b>
TROUBLESHOOTING PHASING ISSUES.....	43
SOL-ARK 5K-1P-N ERROR CODES.....	44
<b>INSTALL VERIFICATION CHECKLIST .....</b>	<b>45</b>
<b>5K-1P-N LIMITED WARRANTY .....</b>	<b>46</b>



## Disclaimer

UNLESS SPECIFICALLY AGREED TO IN WRITING, SOL-ARK:

(a) MAKES NO WARRANTY REGARDING THE ACCURACY, SUFFICIENCY, OR SUITABILITY OF ANY TECHNICAL OR OTHER INFORMATION PROVIDED IN ITS MANUALS OR OTHER DOCUMENTATION.

(b) ASSUMES NO RESPONSIBILITY OR LIABILITY FOR LOSS OR DAMAGE, WHETHER DIRECT, INDIRECT, CONSEQUENTIAL, OR INCIDENTAL, WHICH MIGHT ARISE OUT OF THE USE OF SUCH INFORMATION. THE USE OF ANY SUCH INFORMATION WILL BE ENTIRELY AT THE USER'S RISK.

Sol-Ark cannot be responsible for system failure, damages, or injury resulting from improper installation of their products.

The information included in this manual is subject to change without notice.

This version is for **OUTDOOR MODELS ONLY**.

### Contact Us:

PHONE	1-972-575-8875 x2
EMAIL	<a href="mailto:SUPPORT@SOL-ARK.COM">SUPPORT@SOL-ARK.COM</a>
WEBSITE	<a href="http://WWW.SOL-ARK.COM">WWW.SOL-ARK.COM</a>

## Warning Symbols

	This symbol indicates information that, if ignored, could result in minor injury or damage to the equipment.
	This symbol indicates information that, if ignored, could result in serious injury, damage to the equipment, or death.
	This symbol indicates information that is important but not hazard-related.

## Warnings



Read this entire document before installing or using the Sol-Ark 5K-1P-N inverter. Failure to follow any of the instructions or warnings in this document can result in electrical shock, serious injury, or death. Damage to the 5K-1P-N inverter is also possible, potentially rendering it inoperable.



High Life Risk Due to Fire or Electrocution – **ONLY** qualified persons should install the Sol-Ark 5K-1P-N inverter.



The system must have Ground connections and Neutral connections. Ground **MUST** be bonded to Neutral **ONLY ONCE** in the circuit.



Solar PV+/PV- are **UNGROUND**. Note, you may ground **PV Racking/Mounts**, but doing so directly to the Sol-Ark will likely result in damage in the case of a direct lightning strike to the PV array.



**DO NOT** connect the grid to the Load Output Breaker.



**DO NOT** reverse the polarity of batteries. Damage **WILL** occur.



**DO NOT** exceed more than 500Voc on any MPPT on the Sol-Ark.



**DO NOT** use impact drivers to tighten any fasteners on the Sol-Ark.



**MUST** use Strain Reliefs **ON ALL** wires entering/exiting the Sol-Ark 5K-1P-N user area.



**MUST** use conduit (or double insulated wire) for AC Wires entering/exiting Sol-Ark 5K-1P-N user area.



**ALL** terminals/breakers including battery, MPPT, and AC breaker inputs should only have one conductor connecting to them.

## Inspect Shipment

- A. Compare the package condition to the condition of the package in the photo we sent you before it left our facility.










**You must note any damage due to shipping with delivery driver before accepting the package otherwise the shipping company will deny any claim.**

- B. If damaged, contact us immediately at 972-575-8875 Ext. 3

## Component Guide

- A. French Cleat: For wall mounting the Sol-Ark 5K-1P-N
- B. Stainless Steel Anti-collision bolt M6\*60 x 4
- C. Stainless steel mounting screws M4\*12 x 2
- D. Battery Temperature Sensor: for battery voltage adjustment
- E. CAT 5 cable for parallel communications
- F. Wi-Fi Dongle: For software updates and remote monitoring (use included M4x10 screws to secure dongle)
- G. L-Type Hexagon Wrench x 1
- H. Limiter Sensors included: 5/8" CT sensors x 1 **(Included)**

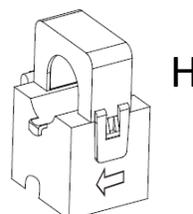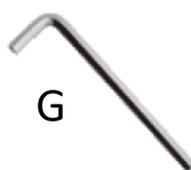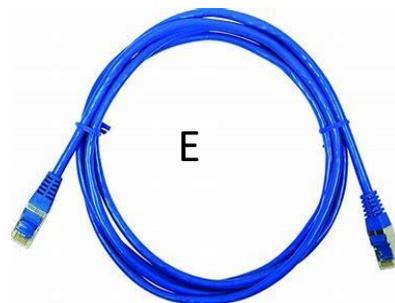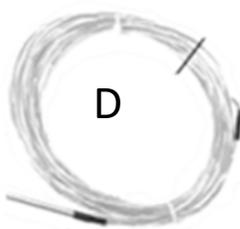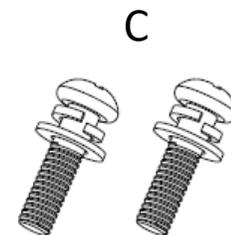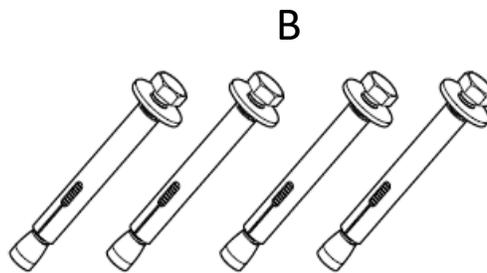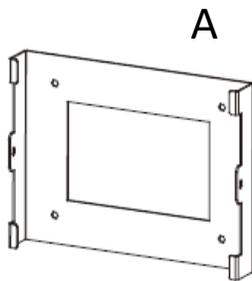



# 5K-1P-N

UL Model:

“5K-120V/  
8K-230V-1P”



### Battery Input Data (Optional)

Type	Lead-Acid or Li-Ion
Nominal DC Input	48V
Capacity	50 — 9900Ah
Voltage Range	40V-60V
Continuous Battery Charging Output	120A
Charging Curve	3-Stage w/ Equalization
Grid to Batt Charging Efficiency	96.0%
External Temperature Sensor	Included
Current Shunt for Accurate % SOC	Integrated
External Gen Start Based on Voltage or %SOC	Integrated
Communication to Lithium Battery	CanBus & RS485

### Solar String Input Data

Max Allowed PV Power	10,400W
PV Input Voltage	370V (100~500V)
PV Input Current	20A + 20A
Starting Voltage / Min Voltage	150V
Number of MPPT / Range (V)	2   125-425V
Solar Strings Per MPPT	2 + 2
MPPT Efficiency	99.90%

### General


Dimensions (H x W x D)	22.8 x 13 x 9.1 in
Weight	51lbs (62lbs package)
Enclosure	IP65 / NEMA 3R
Ambient Temperature	-25~60°C, >45°C De-rating
Noise	<30 dB
Installation Style	Wall-Mounted
Wi-Fi & LAN Communication	5 years
Standard Warranty	5 Years

### AC Output Data

Grid Type (Single Phase only)	120V   1P
Rated AC Output	4,800W
Peak Power (Off-Grid)	10,000W   10S
Rated AC Output Current (A)	40 A
Parallel Stacking	Yes - Up to 8
Frequency	60/50Hz
Max continuous AC passthrough (A)	50A
Max Efficiency	97.6%
Idle Consumption Typical—No Load	60W
Sell Back Power Modes	Limited to Household/Fully Grid-Tied
Design (DC to AC)	Transformerless DC
Response Time (Grid-Tied to Off-Grid)	5ms
Power Factor	+/- 0.8 - 1.0

### Protections & Certifications

PV Input Lightning Protection	Yes
Grid Sell Back — UL1741-2010/2018, IEE-E1547a-2003/2014, FCC 15 Class B	Yes
Anti-Islanding Protection	Integrated
PV String Input Reverse Polarity Detection	Integrated
PV Arc Fault Detection — NEC 690.11	Integrated
Insulation Resistor Detection	Integrated
Residual Current Monitoring Unit	Integrated
Output Over Current Protection	Integrated
Output shorted Protection	Integrated
Surge Protection	DC Type II / AC Type II

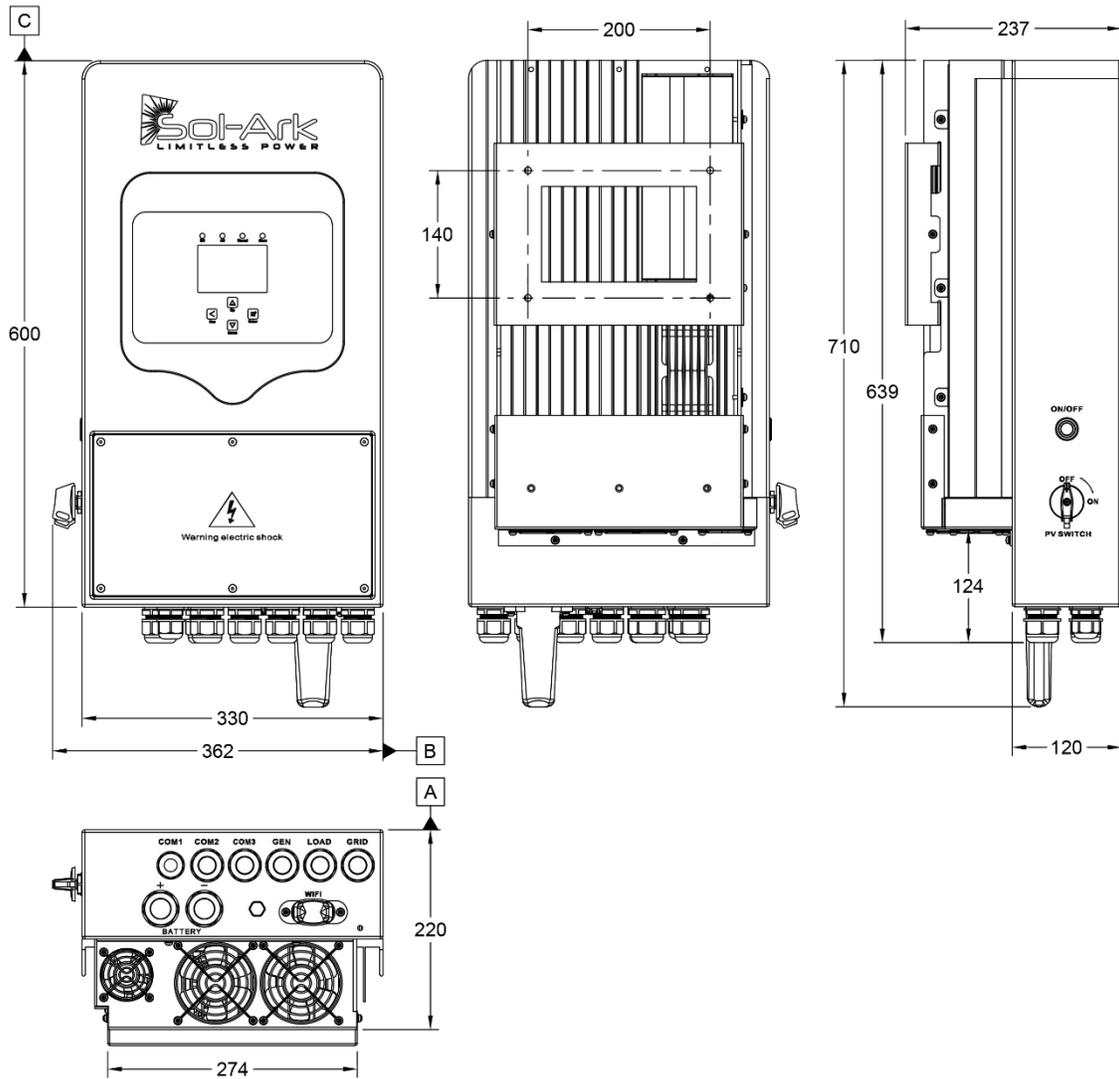

6"     6" minimum vertical clearance | | 2" minimum horizontal clearance     2"

**Temperature Derating**

DC: 90C-100C Shutdown @ 100C

AC: 75C-82C Shutdown @ 82C

## Sol-Ark 5K-1P-N Torque Values Application Note

Load Terminal	17.7 IN Lbs	2 Nm
Grid Terminal	17.7 IN Lbs	2 Nm
Gen Terminal	17.7 IN Lbs	2 Nm
Cover Screws	26.5 IN Lbs	3 Nm
Battery Connection	40.2 IN Lbs	5.2 Nm



**Do Not Use Impact Drivers to Tighten Any Fasteners on the Sol-Ark.**

PV input: 10AWG Max

All AC Inputs/Outputs: 8-6 AWG

All Sensors: 20-24 AWG

CT Sensors: 10' Wire Included

Batt Temp Sensor: 6' Wire Included



RJ45 Cable: 7' Included (Extendable up to 20')

Battery input: 2 – 2/0 AWG (M6 Lugs)




15.875mm (5/8in)

2/0 AWG Max

Small  
Limiter  
Sensor

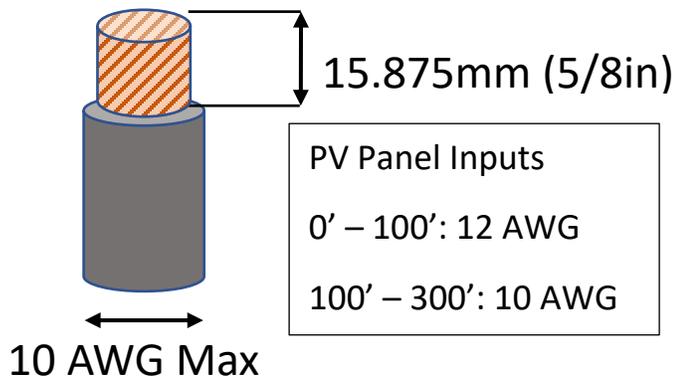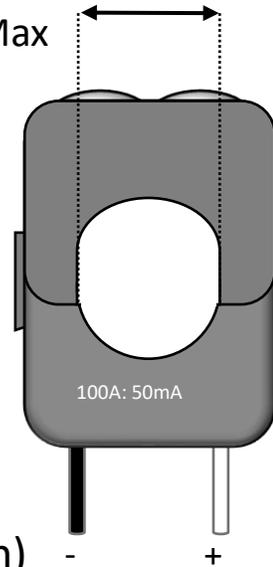

25.4mm (1.0in)

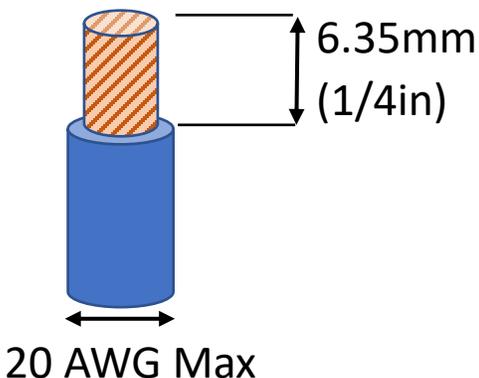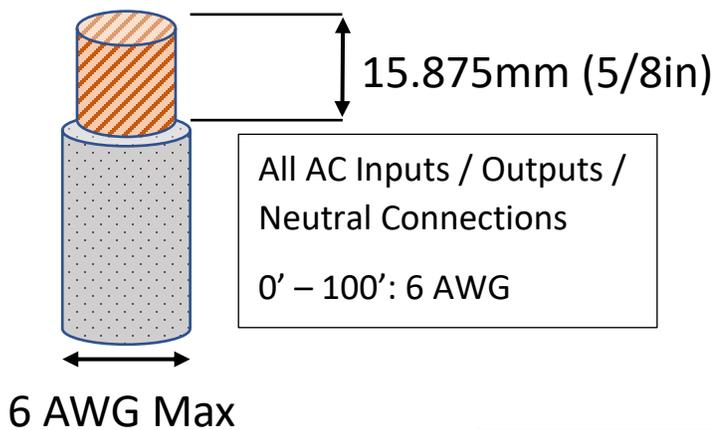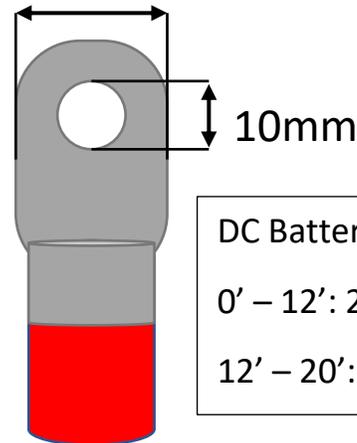

All Sensor Inputs  
0' – 100': 24 AWG  
100' – 400': 23 AWG CAT 6

CT Wires Can Be Extended -Extensions for Limiter  
Sensors must be twisted pair (See pg. 32)

**(Shielded CAT6 Recommended)**



These Single Line Diagrams (SLDs) are examples of common use-cases for Sol-Ark inverters.

Sol-Ark does not provide custom diagrams; however, you may contact [support@sol-ark.com](mailto:support@sol-ark.com) for any questions about an existing SLD.

### Recommended Breaker Sizes



Battery DC Disconnect as needed per Code  
 Gen AC Breaker Size: 30A  
 Load AC Breaker: Included / Built-In  
 Grid AC Breaker Size: 50A

Diagram 1

## Sol-Ark 5K-1P-N Standard Wire Diagram 120V


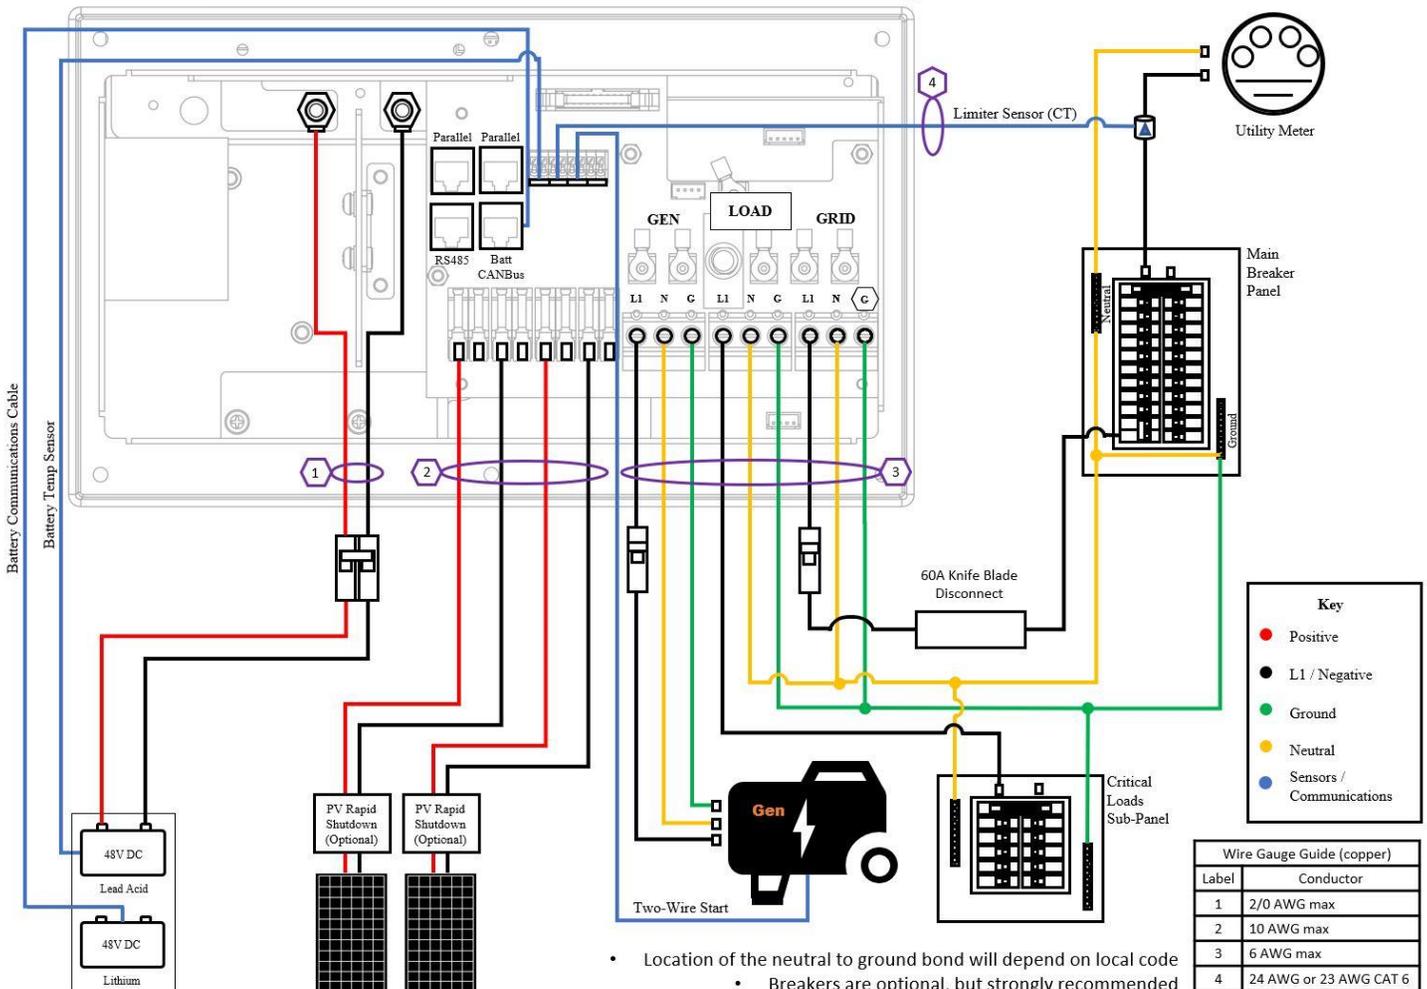



Diagram 2

# Sol-Ark 5K-1P-N Standard Wire Diagram 120V Whole Home Generator

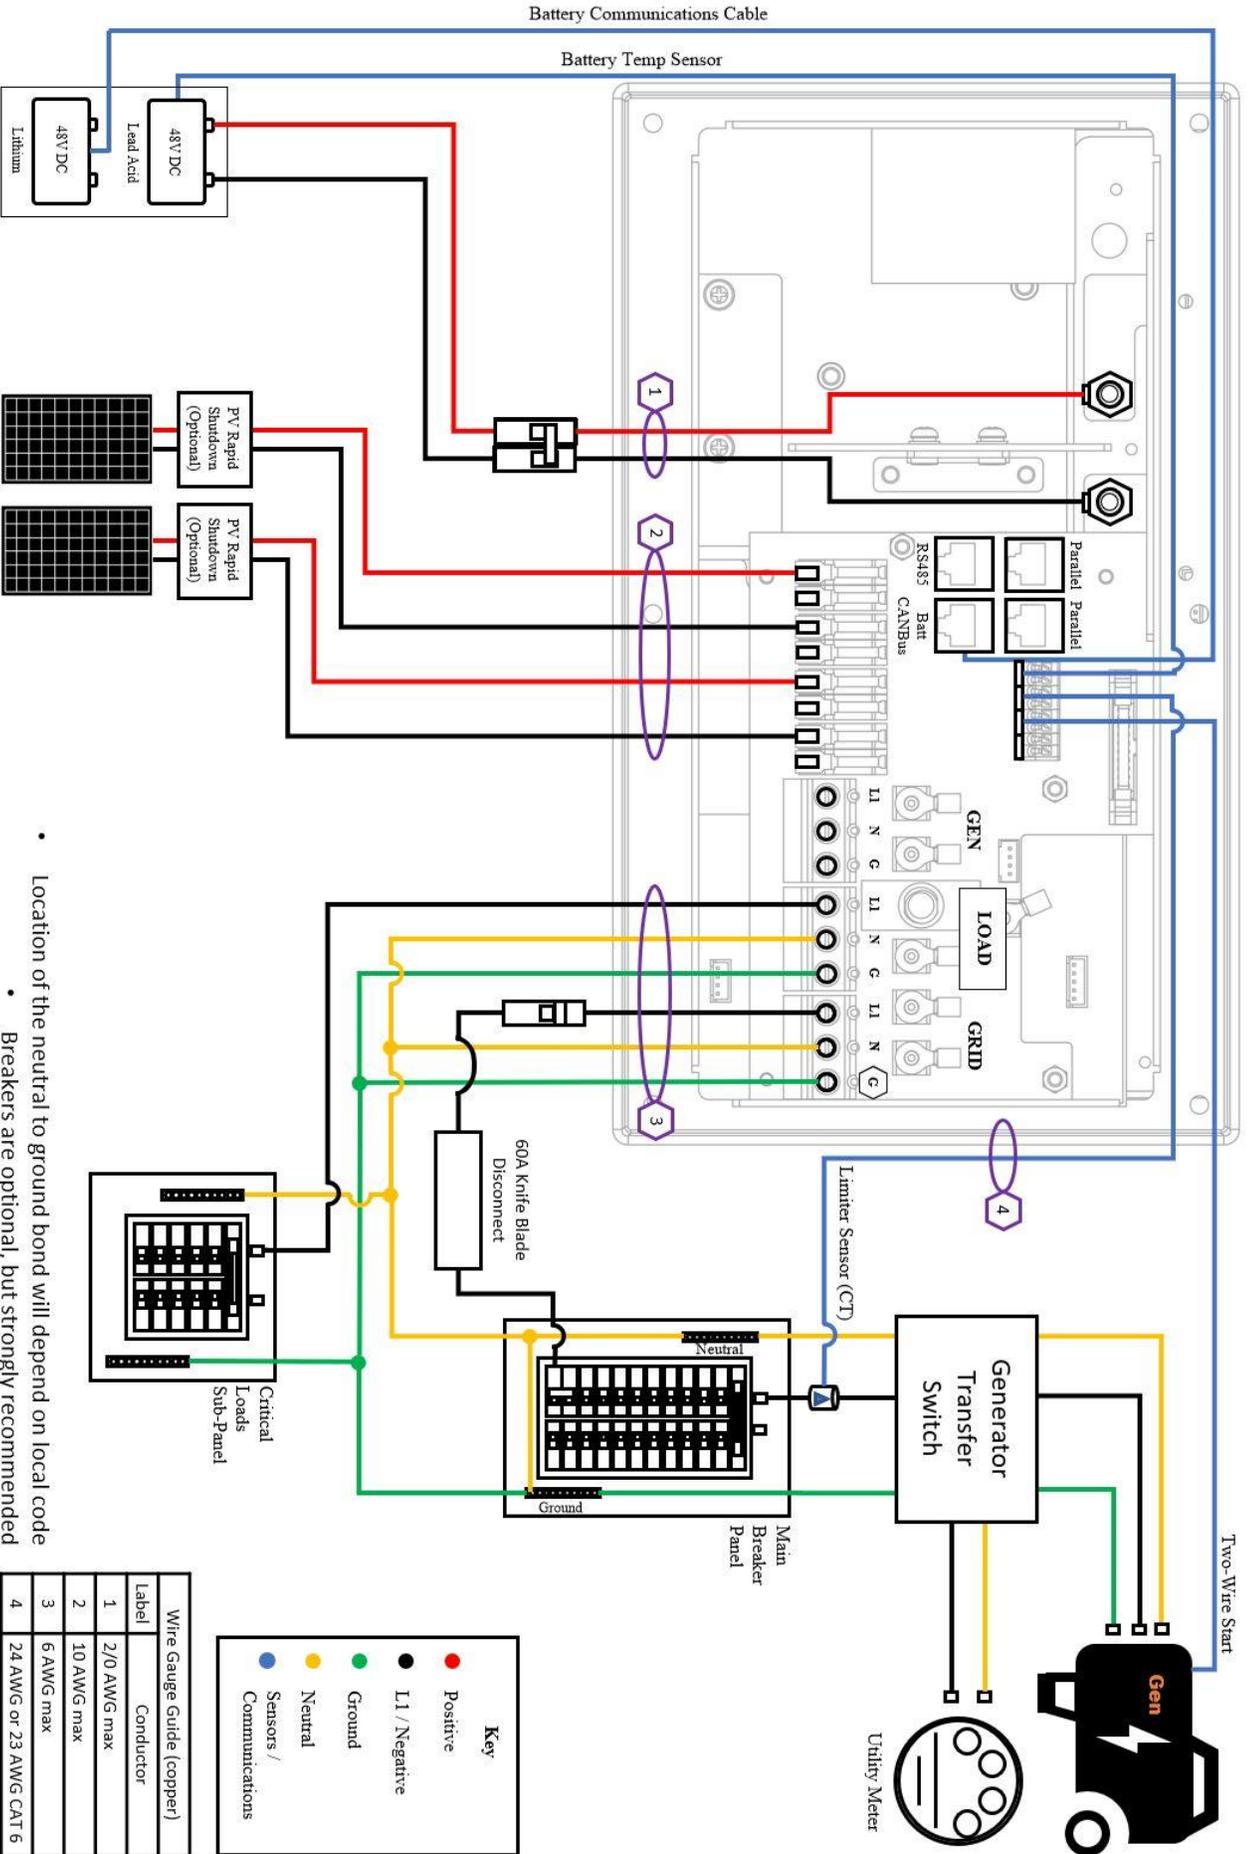

- Location of the neutral to ground bond will depend on local code
- Breakers are optional, but strongly recommended

# Sol-Ark 5K-1P-N Standard Wire Diagram 120V Line-Side Tap

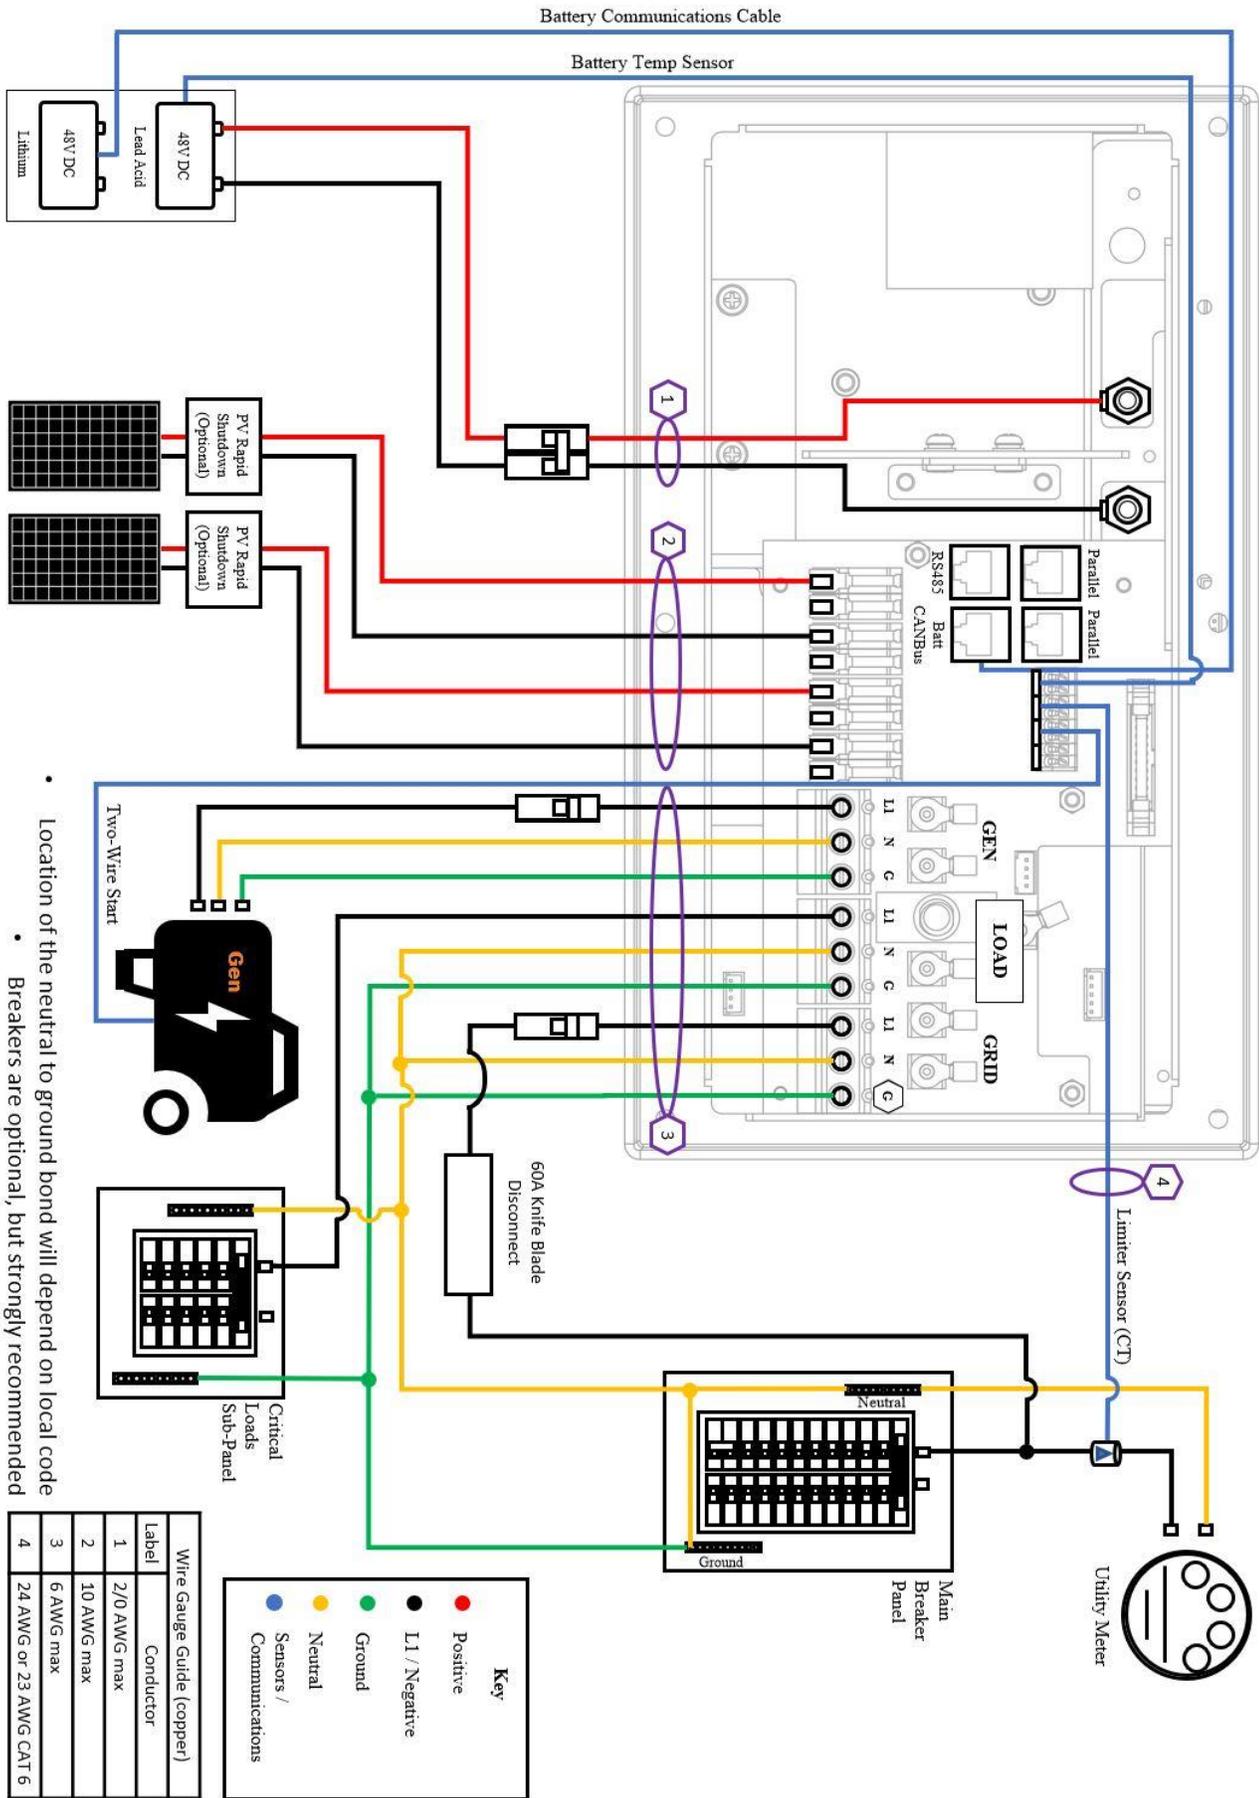

- Location of the neutral to ground bond will depend on local code
- Breakers are optional, but strongly recommended

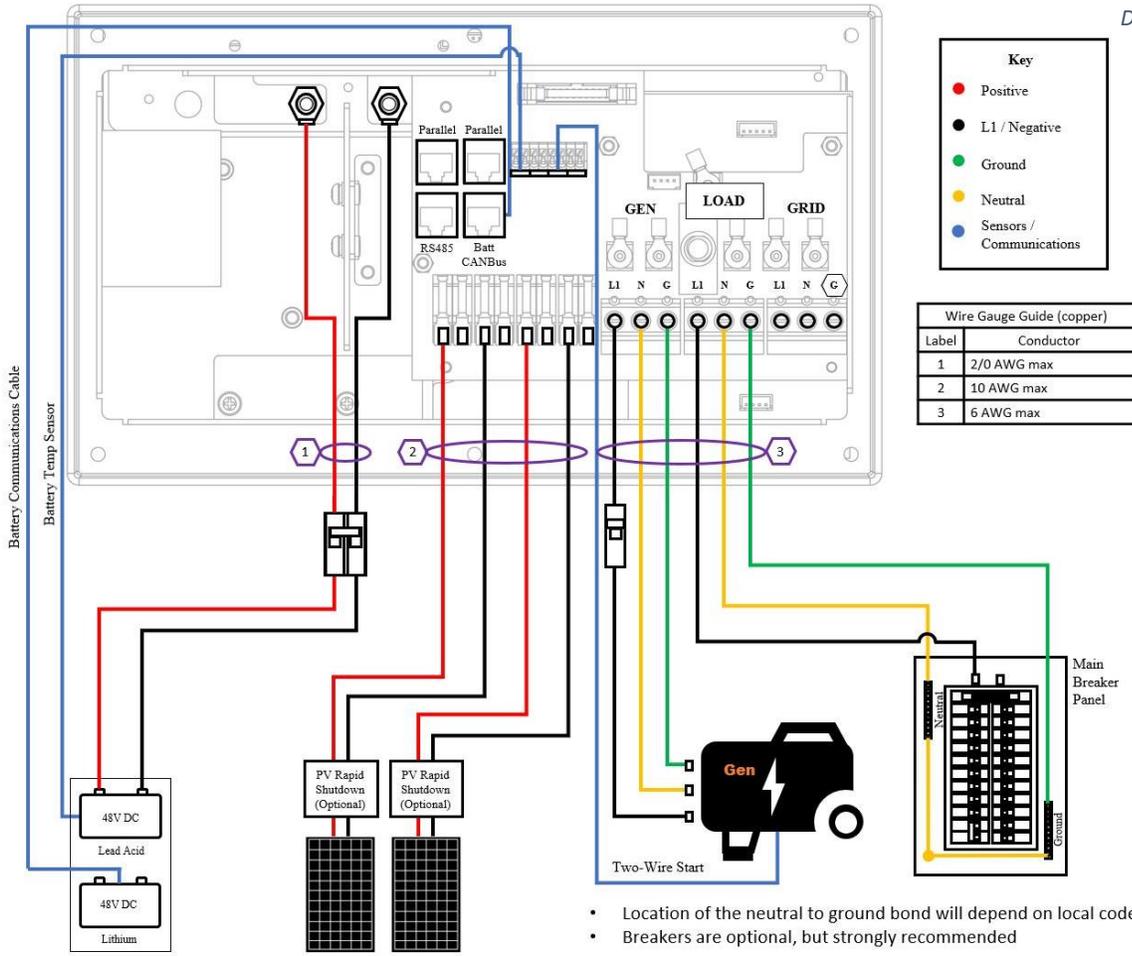


Diagram 4

Sol-Ark 5K-1P-N Off-Grid Standard Wire Diagram 120V  
with Generator on GEN

- Location of the neutral to ground bond will depend on local code
- Breakers are optional, but strongly recommended

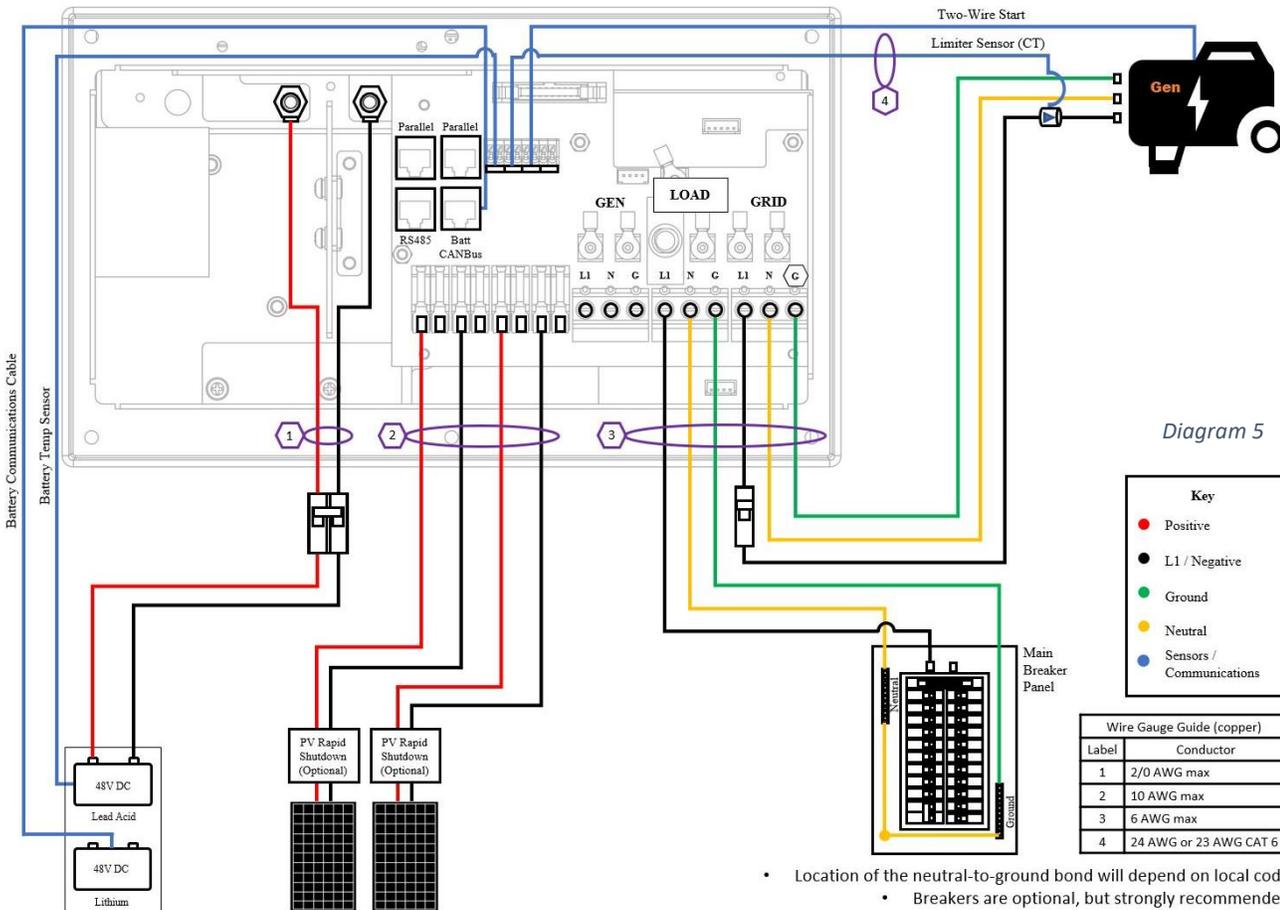



Diagram 5

Sol-Ark 5K-1P-N Off-Grid Standard Wire Diagram 120V  
with Generator on GRID

- Location of the neutral-to-ground bond will depend on local code
- Breakers are optional, but strongly recommended

Diagram 6

Sol-Ark 5K-1P-N x2 Standard Wire Diagram 120V

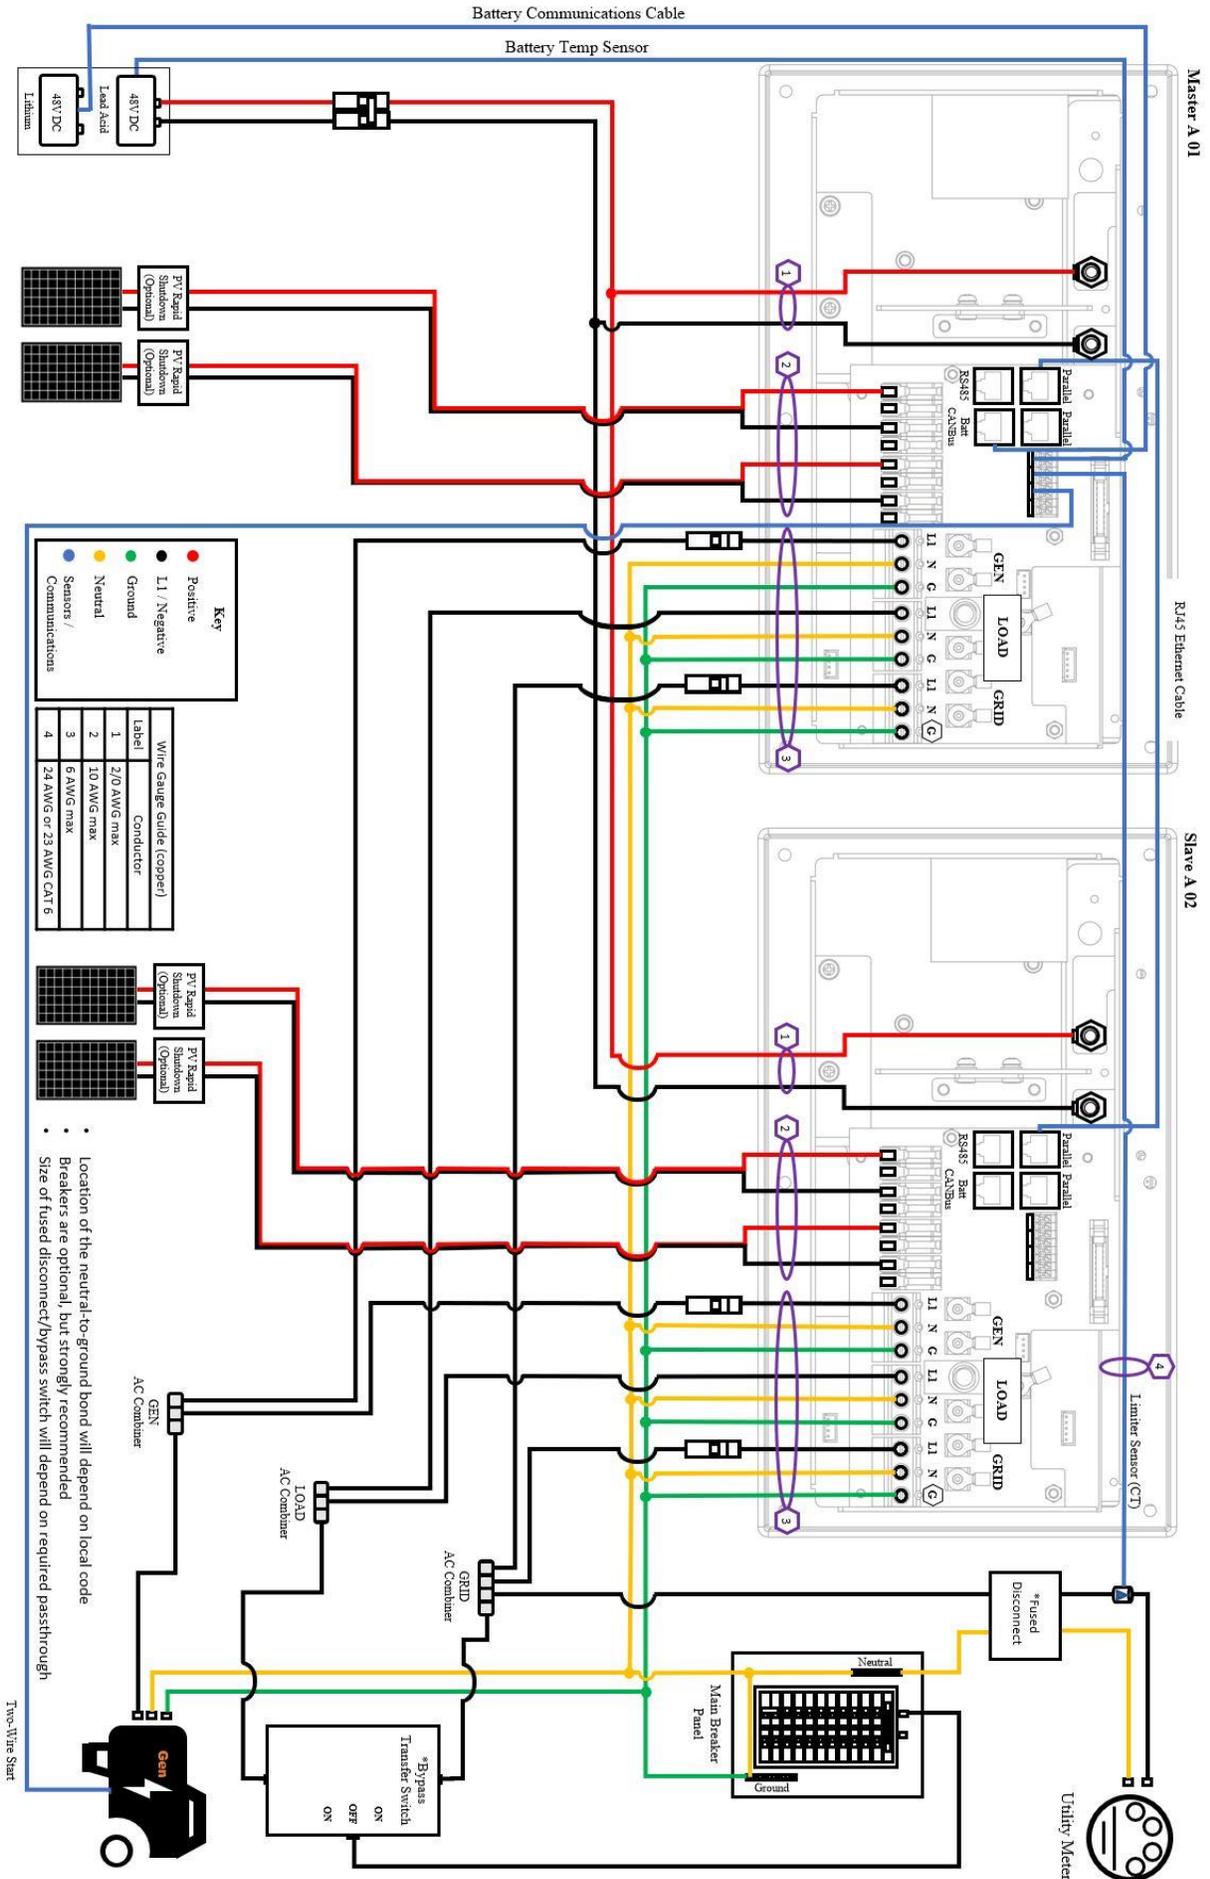


Master A 01

Diagram 7

Slave A 02

Slave A 03

# Sol-Ark 5K-1P-N x3 Standard Wire Diagram 120V

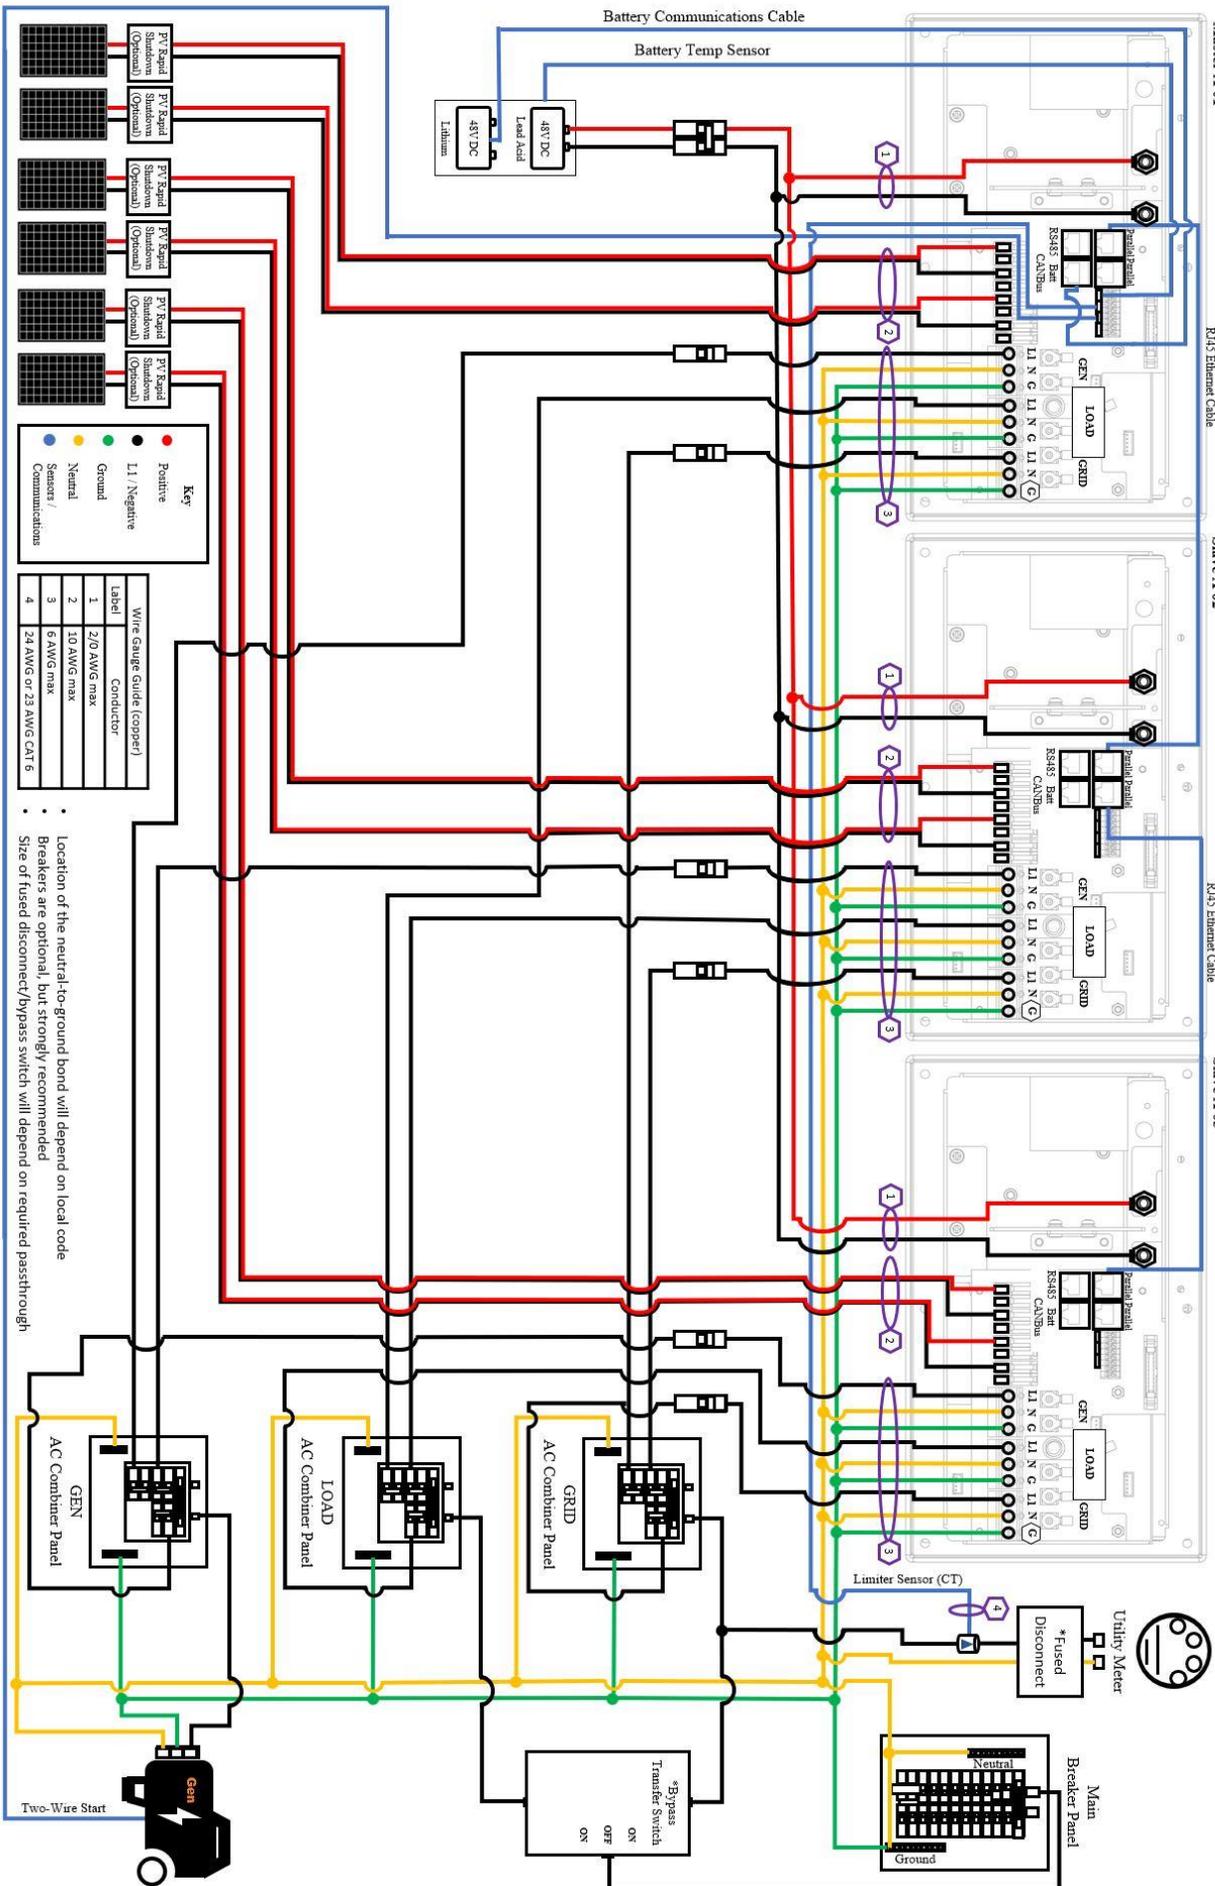

**Key**


- Positive
- L1 / Negative
- Ground
- Neutral
- Sensors / Communications

**Wire Gauge Guide (copper)**

Label	Conductor
1	2/0 AWG max
2	10 AWG max
3	6 AWG max
4	24 AWG or 23 AWG CAT 6

- Location of the neutral-to-ground bond will depend on local code
- Breakers are optional, but strongly recommended
- Size of fused disconnect/bypass switch will depend on required passthrough

## Inverter Components

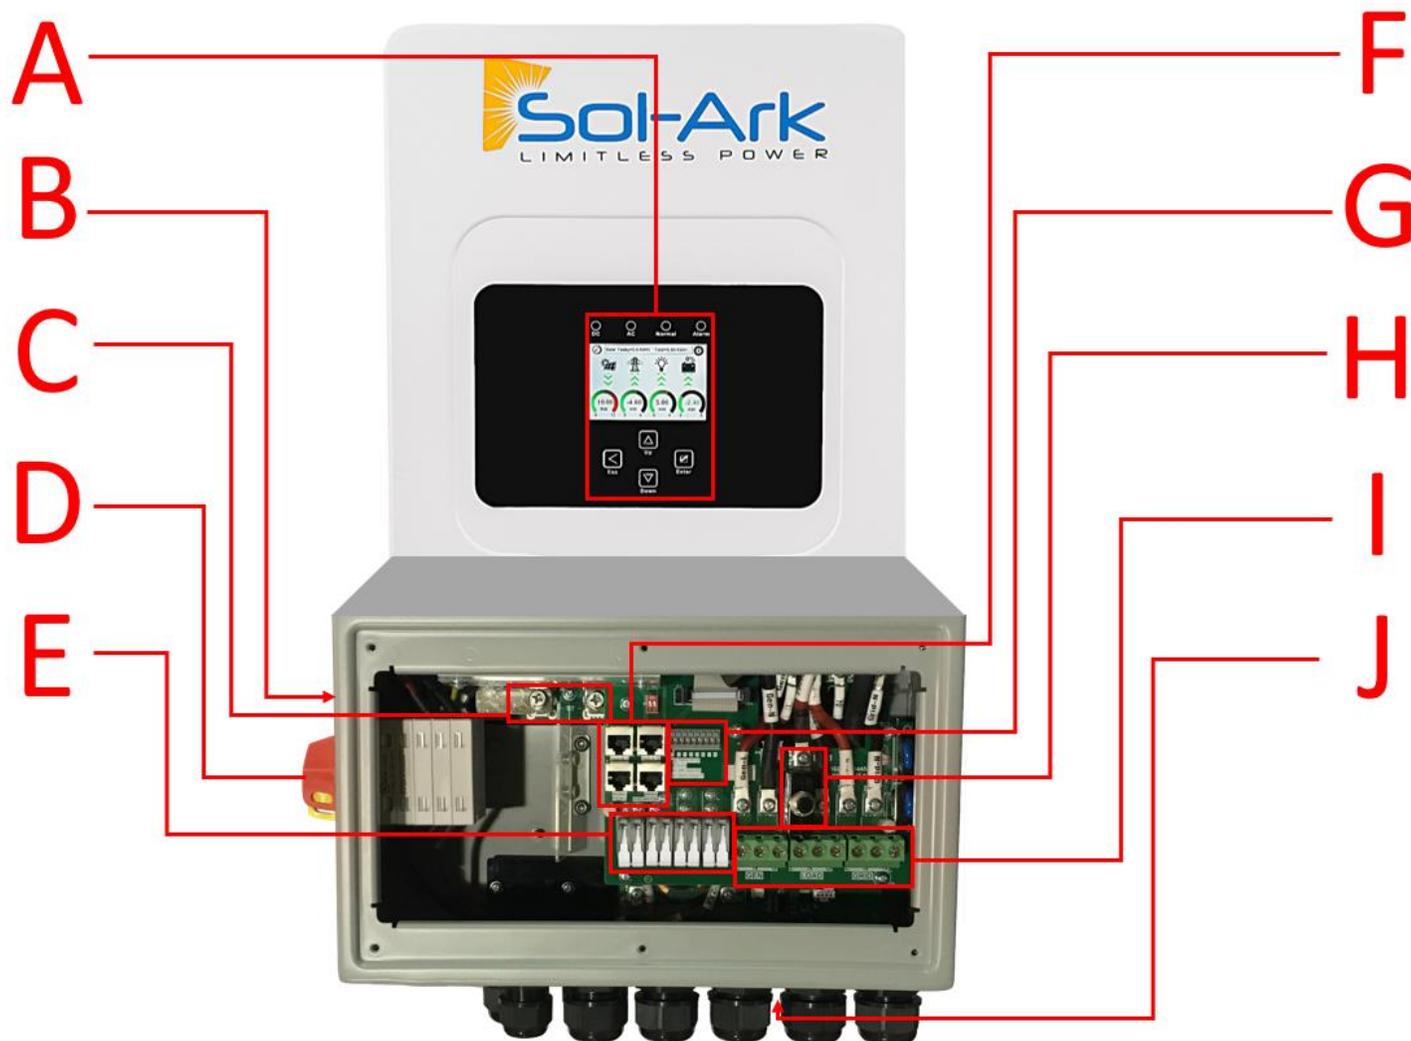

- A. LCD Touch Screen
- B. Power Button
- C. Battery Terminals
- D. PV Disconnect Switch
- E. MPPT Charge Controllers

- F. Comms/Paralleling Ports
- G. Sensor Pin-Out Board
- H. Push Button Load Breaker
- I. AC Gen, Load and Grid Terminals
- J. Remote Monitoring Port

## Deciding Backup Circuits



- A. We recommend subpanels and require them if you have Arc-Fault / GFI breakers.
- B. Ensure you keep the inverter within its amperage limits.
  - ON-Grid = 50A Continuous (pass-through)
  - OFF-Grid = 40A Continuous @ 120V | 10,00W Peak (10s) @ 120V
- C. Verify each load circuit by measuring typical and max Amps with a clip-on Amp meter. Amps x 120V = Watts
- D. Install a subpanel for backup loads if you have Arc-Fault / GFI breakers, NOT a multi-circuit transfer switch.

## Single System Installs

- Install Double Pole 50A breaker in Main Panel for Grid In/Out.
- Best practice to install at the opposite end of the bus bar from the main breaker, which is usually at the bottom of the breaker panel (see figure above).

## Mounting the Sol-Ark

- Keeping in mind Sol-Ark's dimensions, find a suitable location for the system(s).
- NEMA 3R/IP65 rating for Outdoor installations.
- PROTECT the LCD screen from excessive UV exposure.**
- System weight = 51lbs (23.1kg). Securely attach to the wall. Affix a mounting board to studs using 6-8 screws.
- Using 4 screws + washers (choose screw length and surface type) to mount the French Cleat to the board/wall.
- Mount Sol-Ark on the installed French Cleat / Ensure Sol-Ark is level and sits properly.
- Add two screws to connect the chassis to the French Cleat on the left and right sides.

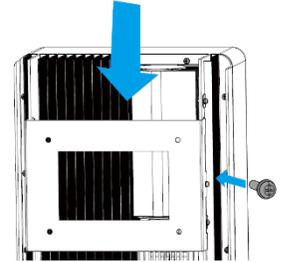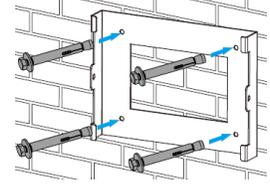

## Integrating Batteries (Sol-Ark POWERED "OFF")

- Connect batteries to Sol-Ark as shown below (size M6 screw)
- Ensure the battery disconnect is OFF while connecting batteries, or arcing may occur


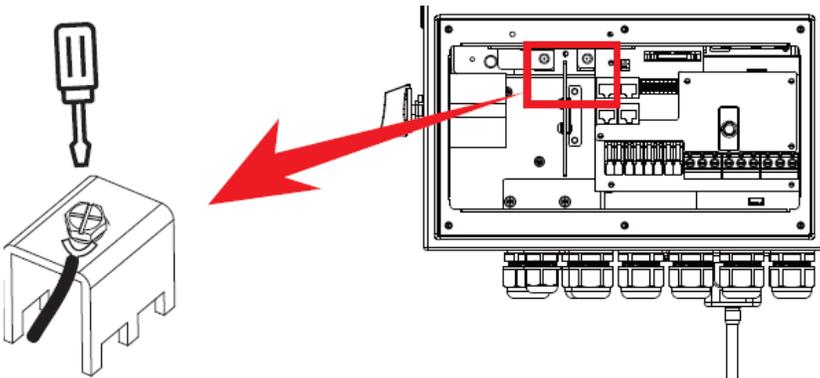


Fig. A

Sol-Ark 5K-1P-N is a **48V** system. Do NOT wire the battery bank to any other nominal voltage.

When using 12V batteries do not exceed FOUR (4) batteries in series.

When using other battery chemistries, stay within the voltage range: MIN 43V-MAX 63V

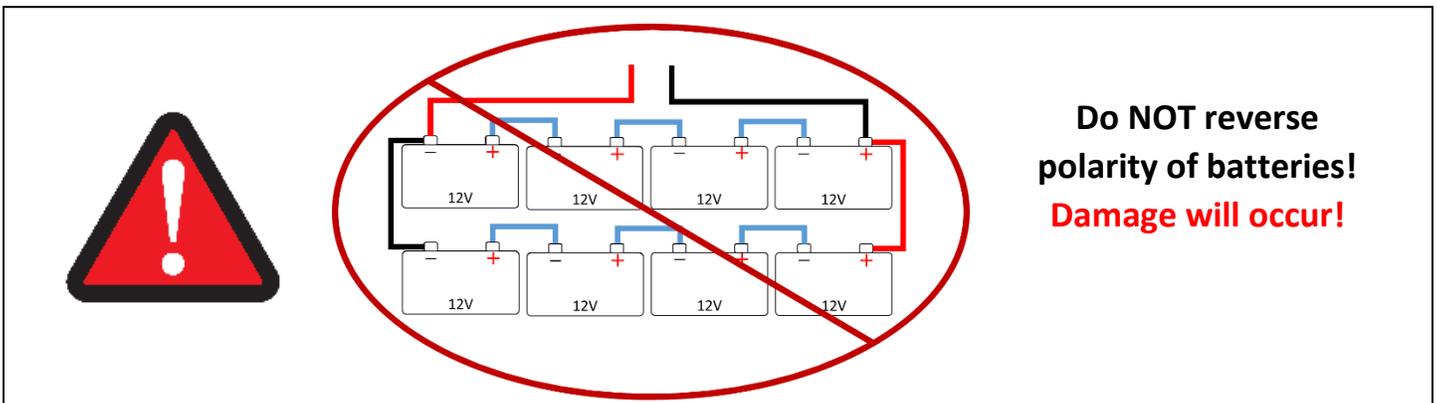


## Connecting Solar Panels

- A. Sol-Ark has DUAL MPPTs for two separate PV input pairs
- B. MAX PV input = 10.4kW ( $\pm 5\%$ ) / system | 5.2kW / MPPT | MAX 500V<sub>oc</sub> PV | MAX I<sub>sc</sub>/MPPT 20A (limiting to 20A)



**Damage will occur if PV V<sub>oc</sub> > 550V**

- C. **Parallel strings per MPPT must be the same Voltage**
  - i. PV1 A/B must be the same voltage if using both strings
  - ii. Panels on the same MPPT CAN face different directions
- D. Ground the panel MOUNTS/FRAMES to any ground in the Home via 12AWG wire
- E. Connect the solar panel strings as indicated by the following diagram:

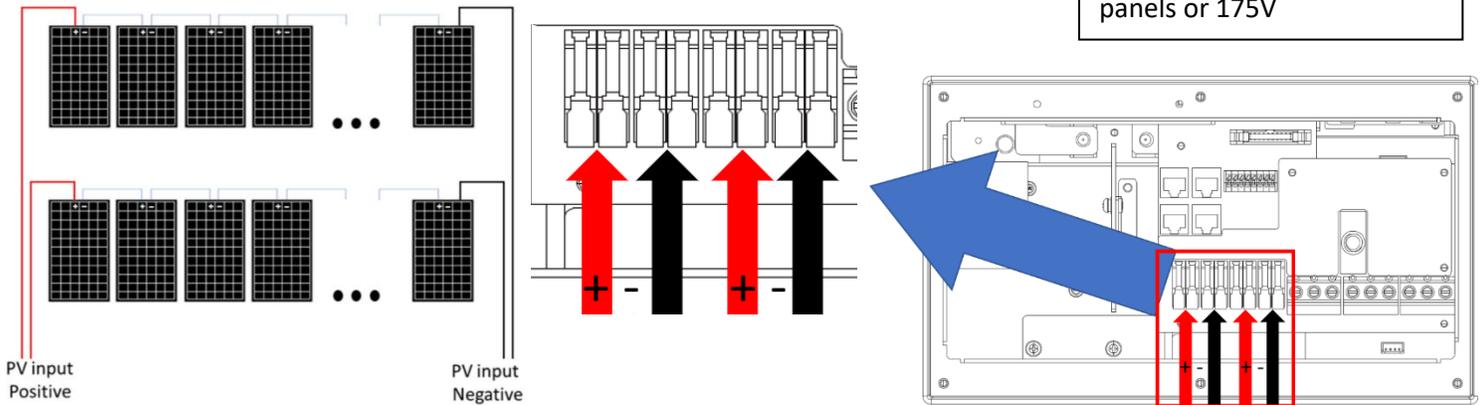


Each string **can** use separate wires

String minimum is usually 5 panels or 175V

## Grid | Load | GEN

Before connecting to grid, please install a separate AC breaker between inverter and grid and between backup load and inverter. This will ensure the inverter can be securely disconnected during maintenance and fully protected from overcurrent.

1. Before making Grid, load, and Gen port connection, be sure to turn off AC breakers or disconnectors first.
2. Remove 10mm length of insulation sleeve, unscrew the bolts, insert the wires according to polarities indicated on the terminal.
3. Then, insert AC output wires according to polarities indicated on the terminal block and tighten terminal. Be sure to connect corresponding N wires and PE wires to related terminals as well.
4. Make sure the wires are securely connected.
5. Appliances such as air conditioners require at least 2-3 minutes to restart because they need enough time to balance refrigerant gases inside of circuit. If a power shortage occurs and recovers in short time, it will cause damage to your connected appliances. To prevent this kind of damage, please check of the air conditioner manufacturer to see if it is equipped with a time-delay function before installation. Otherwise, this inverter will trigger overload fault and cut off output to protect your appliance but sometimes it will still cause internal damage to the air conditioner block. Tighten the terminal screws for a secure and complete connection.

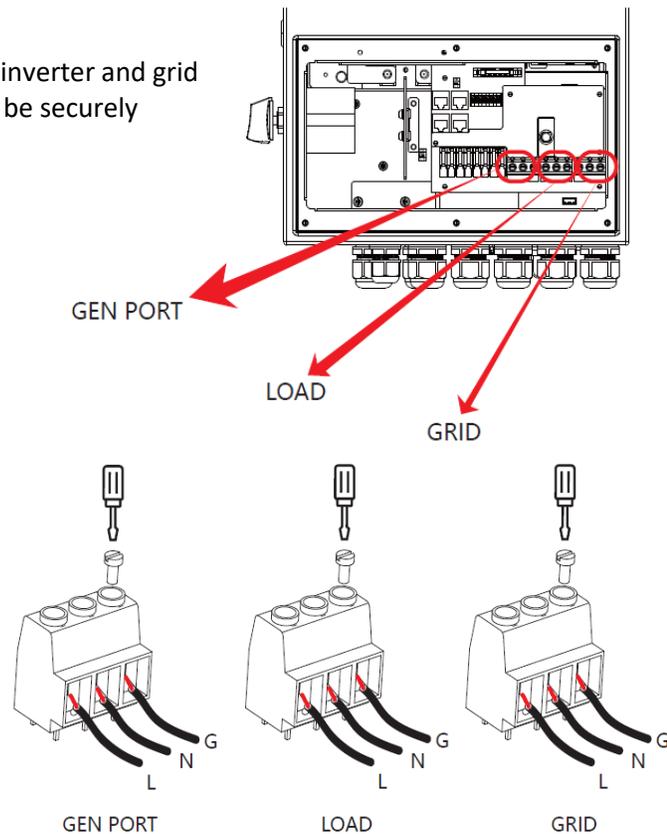

# Integrating a Generator

## Generators < 3.6kW (GEN Breaker)

- A. Supports 120V generators | 30A breaker
- B. Connect the generator output to the "GEN" input breaker connected to the Sol-Ark 5K-1P-N user area
- C. THD of less than 15% preferred but not required

## Standby Generators > 3.6kW (GRID Breaker) (OFF-GRID)

- A. Supports 120V / 240V generators | Depends on "Grid Type" selection
- B. **Off-Grid** / Whole-home Generator on ATS installations require selecting "GEN Connected to Grid Input"  
 Home Screen → Gear Icon → Grid Setup → Sell Control → GEN Connected to Grid Input
- C. Off-Grid = turn "Grid Sell" off | Only need a CT (on Gen line) if using Grid Peak Shaving (see below)



### Increase Gen/Sol-Ark efficiency

1. Select "Limited Power to Load"
2. Select "General Standard"
3. Increase Grid frequency range: 55-65Hz

## Weekly Gen Exercise

If the Sol-Ark is up to date with MCU version xx73 or newer, and your generator has two-wire start compatibility, you will experience weekly generator tests.


These tests occur at 8AM (local time) every Monday by default.

The test takes approximately 20 minutes to complete. During that time, the generator will auto-start and auto-stop.

The generator will not provide power during this test. The generator may charge the batteries if the batteries reach designated generator start point, however.

## Grid Peak Shaving Mode (For Gen Connected to Grid Breaker)

- A. Prevents the Sol-Ark from overloading generators
- B. Must place the CT sensors so that they measure L1 of the generator's output, pointing arrows on the CTs towards the generator
- C. Sol-Ark contributes power above the "Power" value threshold to prevent overloading the generator
- D. This mode will auto-adjust the Grid Charge Amperage to avoid overloads
- E. Time of Use (TOU) will be enabled if Grid peak-shaving is enabled

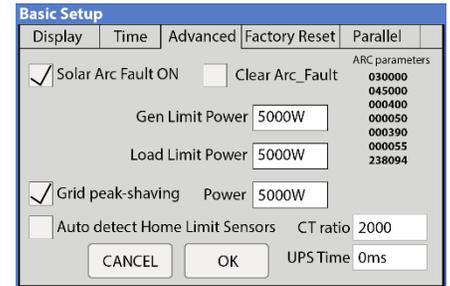

## Gen Start V or % (Grid Start if Gen on Grid Breaker)


Value batts need to reach **BEFORE** automatically starting a generator connected to the GEN breaker to charge the battery bank.



Sol-Ark will NOT charge batteries from a generator until the batteries reach this value.


## Gen Start A (Grid Start if Gen on Grid Breaker)

This is how many amps (**DC**) you can pull specifically from the Generator to charge the batts. To ensure you do not overload a small Generator, you will want to adjust the GEN or GRID Start A value. **Multiply value by # of Sol-Arks for actual current value into batteries.**

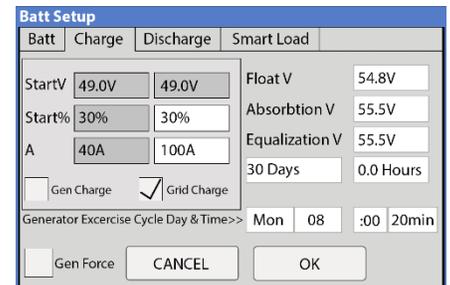

**Suppose PV production = 0W | Disabled TOU | Enabled Grid/Gen Charge:** the batteries will be charged to "full" using the Grid or a Generator (if available) until the battery bank accepts only 5% of its rated capacity in Amperes. This value correlates to roughly 90-93% full for most batteries and is the generator's default "OFF" signal. If producing PV, the system will use PV to charge the batteries to 100% full instead.

# Integrating Sensors and Accessory Placement

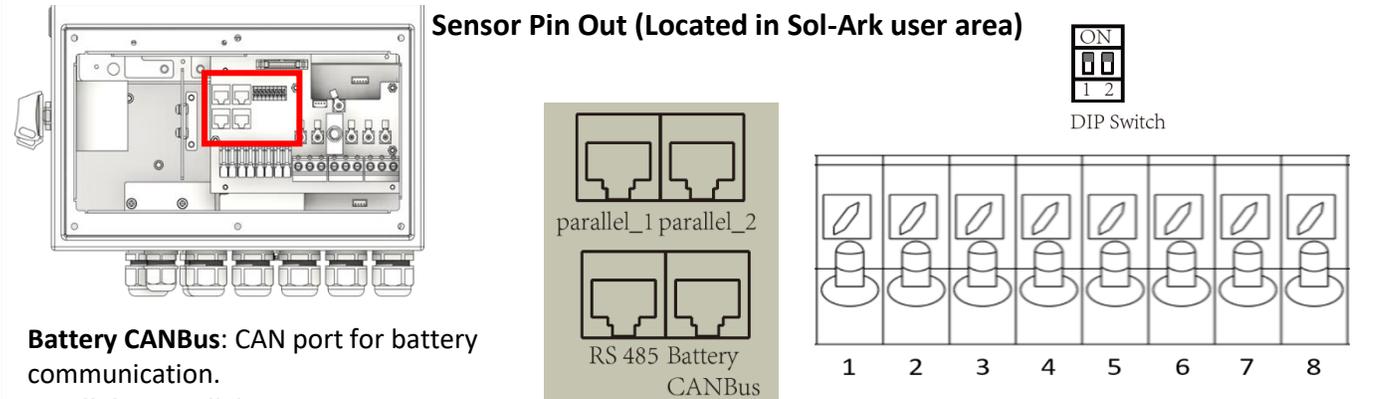

**Sensor Pin Out (Located in Sol-Ark user area)**

**Battery CANBus:** CAN port for battery communication.

**Parallel 1:** Parallel communication port 1 (CAN interface).

**Parallel 2:** Parallel communication port 2 (CAN interface).

**\*RS485:** for energy meter communication.

**\*Some hardware versions don't have this port.**

DIP switch: Parallel communication resistor  
 If the number of inverters in the parallel system is less than or equal to 6, all inverter's DIP switch (1&2) need be ON position. If the number of inverters in parallel system exceeds 6, the main 6pcs inverter's DIP switch needs to be ON position. And the other inverter DIP switch (1&2) needs to be OFF position.

**(1,2) Batt Temp:** Battery Temperature Sensor has no polarity and is needed for voltage correction when using lead acid batteries.

**(+3, -4) CT1:** Current transformer used for Limited Power to Home mode and peak shaving

**(5,6) Gen Start Relay:** Two wire start for generators, simple open or closed relay

**(7,8) Gen ON Relay:** Not Currently Used


## Battery Temperature Sensor

- Place between batteries with tape (See Fig. C).
- This sensor has no polarity and helps perform voltage charging adjustments and capacity calculations.



**Note:** Lithium Batteries do NOT require a Temperature sensor.

Fig. C

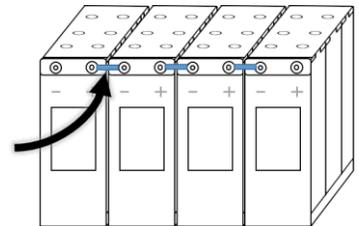

## Limiter Sensor (CT Sensor)

- Install sensor on incoming electrical service wire on L1 (see Diagrams Section).
- Limited Power to Home mode (meter zero) and Grid peak-shaving mode requires the CT sensor.
- To ensure the sensor will fit, please check the wire size before ordering.
- See pg. 31 for additional CT sensor information.

## GEN Start Signal (Two-Wire)

- The signal comes from a normally open relay that closes when the Gen Start state is active.

## CANbus & RS485

- To connect batteries to the Sol-Ark 5K-1P-N via RJ45, you need to splice the end connecting to the Sol-Ark.
- Use the middle two conductors.
- RS485 is SunSpec draft 4 (will not work with draft 3).

## Wi-Fi Antenna (Dongle)

Remote monitoring and software updates require an internet connection through the Wi-Fi dongle.

# Powering-Up and Testing the Sol-Ark 5K-1P-N

## Check the voltage on each PV input circuit

- A. Should be no higher than 500Voc Temp. corrected.
-  **B. DO NOT connect PV+ OR PV- to GND**
- C. Verify polarity (backward polarity shows 0V on the inverter).



Turn ON with one of three sources of power:  
1) PV      2) Grid      3) ON/OFF Battery

## Check Grid Input Voltage

- A. Measure L1 to Neutral. Ensure 120Vac
- B. Measure L1 to Ground. Ensure 120Vac
- C. Measure Neutral to Ground. Ensure ~0Vac
- D. Verify L1 voltage on AC in/out is 0Vac with the main L1 connection in the panel

## Check Battery Voltage

- A. Turn on the battery switch (if using a Lithium battery)
- B. The voltage should be 45Vdc-60Vdc

## Provide Power to Sol-Ark

- A. Turn on a grid breaker and a load breaker
- B. Turn PV disconnect switch to the "ON" position
- C. Press the ON/OFF Button on the front, and the blue light should turn on

## Indicator LED's

### DC

- A. Green = DC Solar Panels are producing
- B. Off = Solar Panels are not producing

### AC

- A. Green = Grid (or Gen or AC Coupled) is connected
- B. Off = Grid is not connected

### Normal


- A. Green = Sol-Ark 5K-1P-N is working properly
- B. Off = Sol-Ark 5K-1P-N is not working properly

### Alarm

- A. Red = Alarm, check the alarms menu
- B. Off = No alarms

## Power Cycle Sequence

1. Turn on the battery disconnect.
2. Make sure that Sol-Ark 5K-1P is properly connected to the batteries, panels, grid, etc. (see system wiring diagram).
3. Turn on grid power breakers.
4. Press the power button on the side of the unit.
5. Make sure Solar panel inputs are not connected to Ground, then turn on DC disconnect switch.
6. Turn on load breakers.
7. Reverse the steps to turn off.

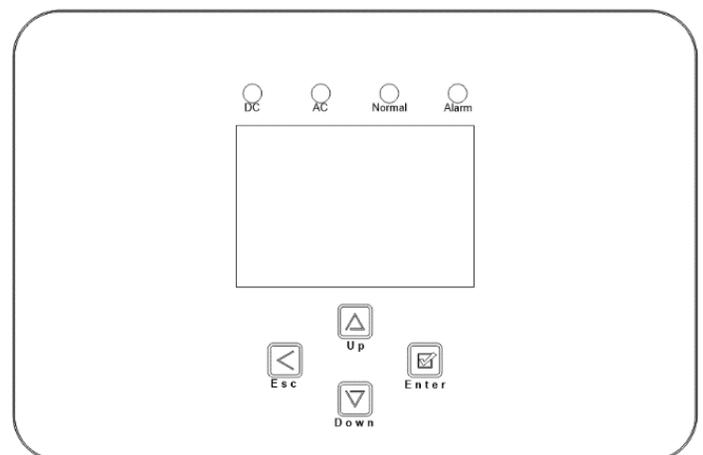

## Remote Monitoring Setup

### Ethernet Dongle

- A. Open the dongle enclosure and thread the ethernet cable through the hole and plug into the RJ45 port.
- B. Reassemble the dongle housing and plug dongle into Sol-Ark and secure with screws.  
If all is well, you will see solid red and green lights.
- C. Register the dongle via the app or [www.mysol-ark.com](http://www.mysol-ark.com).

### Wi-Fi (Via Cell Phone or computer)

- A. Plug Wi-Fi dongle into Sol-Ark.
- B. Using your device look for an "EAP" network containing the last 5 digits of the dongle S/N.
- C. Password: 12345678
- D. Follow the instructions in the upcoming pages.



You can access PowerView on a computer with the following link:

<http://www.mysol-ark.com>



## Download PV Pro App



iPhone: (Will only show up as PV Pro)  
<https://apps.apple.com/lk/app/power-view-pro/id1247121391>



Android  
[https://play.google.com/store/apps/details?id=com.elinter.app.powerview&hl=en\\_US&gl=US](https://play.google.com/store/apps/details?id=com.elinter.app.powerview&hl=en_US&gl=US)



### Attention Installers

If you plan to add an install to your installer account for monitoring multiple installs, you must first make the plant under the **customer's** account.

Once created, the customer can share the plant, with **Manager permissions**, to the installer via the app ("..." under My Plants) or webpage (press the "..." next to the plant name in Power View).

PV Pro App  
Tutorial Video



PV Pro Website  
Tutorial Video



## Create an Account and Sign In

Account login

Please input your E-mail

Password

Sign Up | Forgot Password

Sign Up

Phone Number

Please input E-mail

Please input verification code GET CODE

Password

Click [CONFIRM], you agree and are willing to comply [\(Terms of Service\)](#)

Sign Up

After filling the form click "Create Account"

Account login

Please input your E-mail

Password

Sign In

Sign Up | Forgot Password

## Add a Plant

Plant Name

Create Plant

0 Online 0 Warning 0 Fault 0 Total

Create time Efficiency

No Data

Plants Equipment Event Me

Scan the QR code on the dongle while plugged in

ETH + Wi-Fi Stick  
FNI: 1E5B 0200 00  
SN: 1440 703 3220  
CP: 0200 0000 0000 0000

Ethernet + Wi-Fi Stick (159)

Please put QR Code in the box

Manual input On

Create Plant

SN E#####

Key #####

Plant Information

Plant Name\* TEST

Plant photos

Installed Capacity\* 10 kWp

Operating Date\* 2021-03-25

Installer Sol-Ark

Address\* 5833 Curtis Rd Parker

Time zone\* (UTC-6:00)Central Time (US & Cana...)

Plant Type\* Energy Storage (DC coupling)

Income information

Currency\* \$

On Plant Type, **ALWAYS** select Energy Storage (DC coupling).

Make sure to pick a unique plant name. (I.E. "Last Name, First four of Address")

# Connect the System to the Internet


If Wi-Fi paired with 10.10.10.1, select Done




**DISTRIBUTION NETWORK**

You can click the confirm button in the upper right corner to complete the creation or to configure the network for the collector

Select Distribution Network to pair Dongle with WIFI

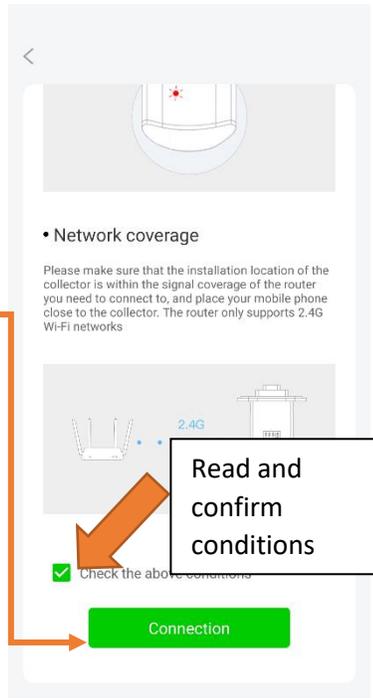


Read and confirm conditions

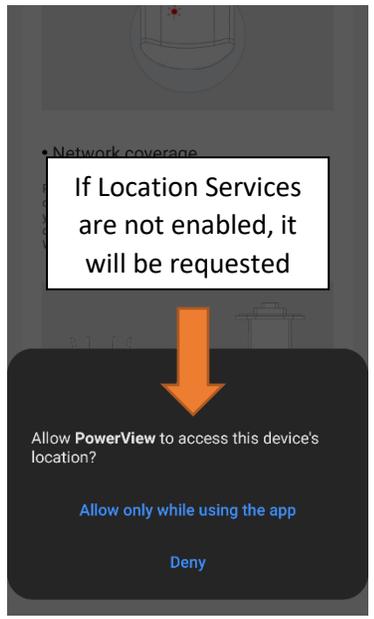


If Location Services are not enabled, it will be requested

Allow PowerView to access this device's location?

Once you see this screen, go to your **DEVICE'S** Wi-Fi settings and connect to the Wi-Fi network that starts with:  
EAP-#####  
Password: "12345678"  
Return to app once connected

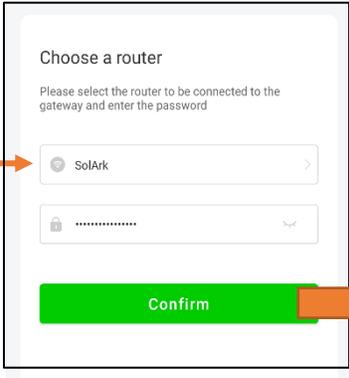

Select the local Wi-Fi network that will be providing the internet connection to the system  
**Do NOT select the dongle's Wi-Fi network**

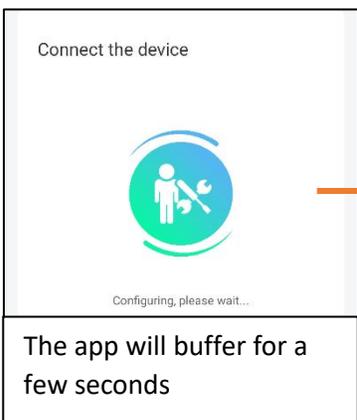


The app will buffer for a few seconds




## Start Monitoring The Data

It takes about 60sec for the lights to turn on after setup  
**Red LED:** Connected to Sol-Ark and has power  
**Green LED:** Connected to Internet and Server  
**Flashing Green LED:** Connected to router but not server (usually a VPN or firewall issue)

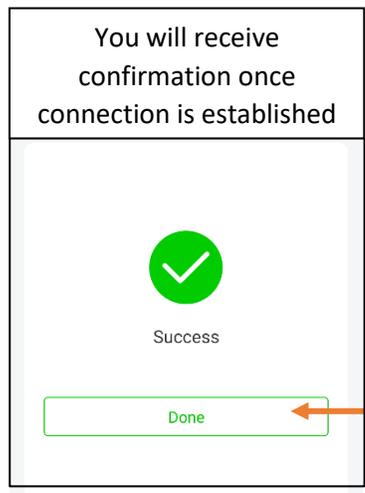

Success

Done

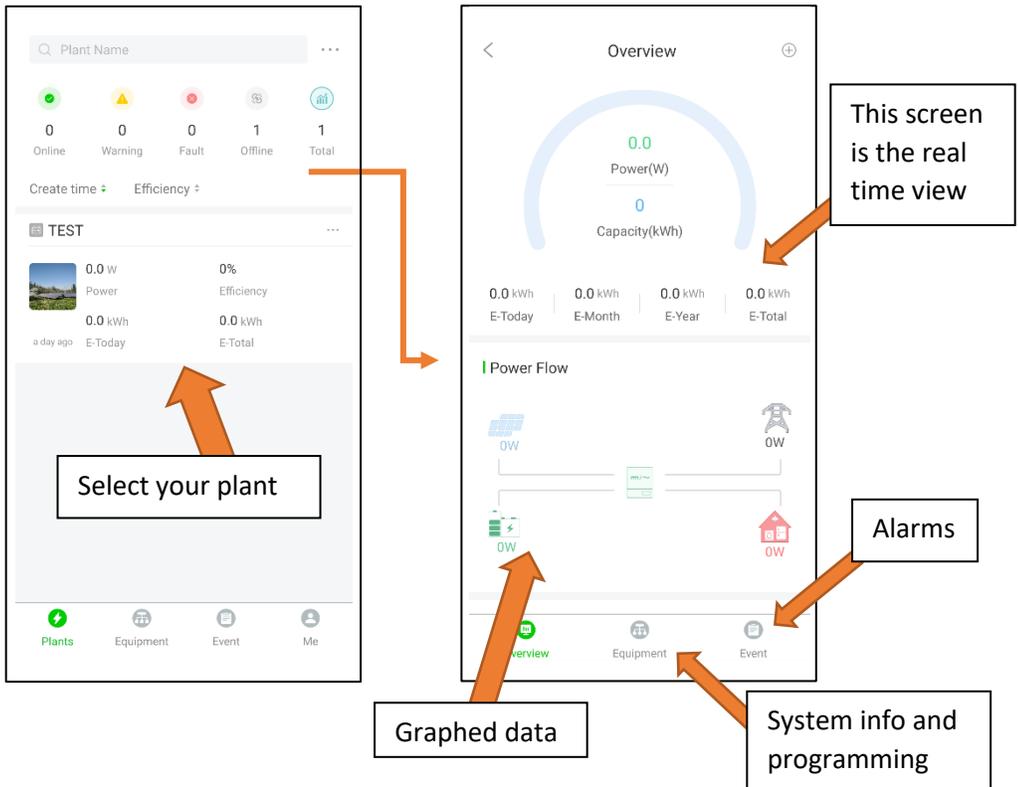


## IP Address Setup Instructions (PC or Smart Phone)



Please Note that this method only achieves internet connectivity. For registration and account management please use the app and/or [www.mysol-ark.com](http://www.mysol-ark.com)

## Connect to the Dongle Network

- A. Settings → Wi-Fi → Select the Network with EAP- ##### (The last 5 digits of your SN number)

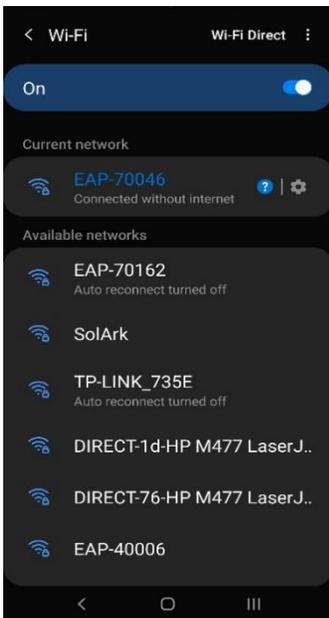

Password: 12345678



**\*Disclaimer\*:** The Wi-Fi dongle does not have internet; You still need to be connected to the dongle for this process.

## Login to Web Portal using ANY Search Browser

- Open Google or Safari → type in the search bar: **10.10.10.1**
- Scroll Down to "Wi-Fi Connection"
- Press "Scan" to search local networks

## Select Your HOME Network

- Find the home network
- Enter personal Wi-Fi Password
- DO NOT SELECT DONGLE NETWORK**
- Select "Connect"

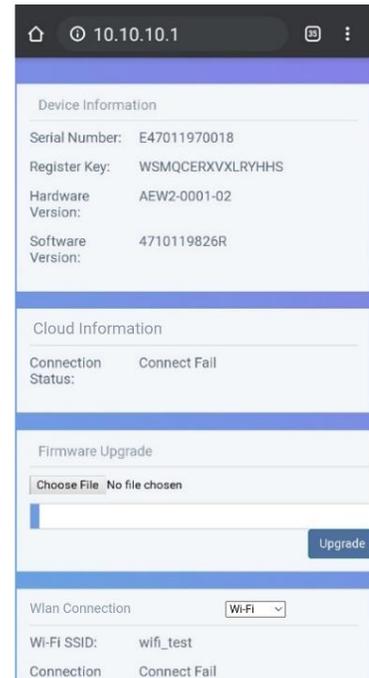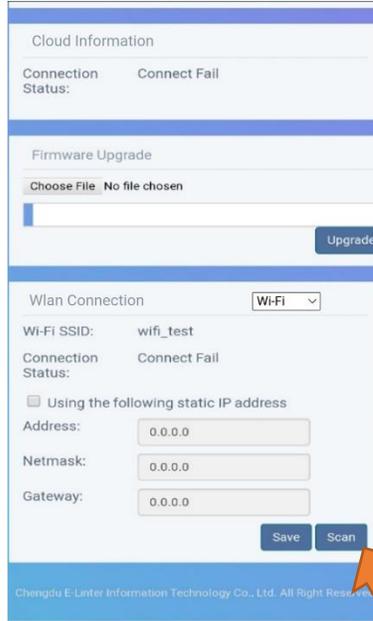


\*Disclaimer\*

Connecting the dongle via the IP address only connects the dongle to the internet

**\*YOU MUST STILL CREATE AN ACCOUNT VIA THE POWER VIEW APP\***

## Save Your Information

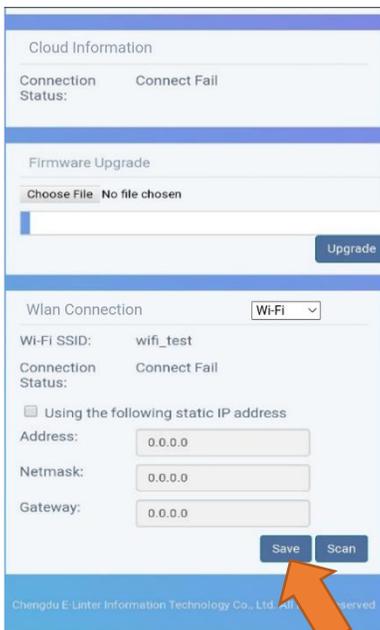

If Successful you should see a Red and Green light on the Dongle showing a successful connection.

**Red LED:** Connected to Sol-Ark and has power.

**Green LED:** Connected to Internet and Server

**Flashing Green LED:** Connected to router but not server (usually a VPN or firewall issue)



## Main Menus

Solar Today=53KWH Total=559.8KWH

Solar	Grid	INV	USP LD	Batt
0W	4654W	-4654W	0W	-4248W
M1: 0V	116V	116V	119V	59%
0.0A	39.6A	40.7A		54.23V
0W	HM: 21W			-78.34A
M2: 0V	LD: 4654W			23.0C
0.0A			<b>Gen</b>	<b>TEMP</b>
0W			0V	DC: 36.7C
			0.0Hz	AC:30.2C
			0W	

System Setup 1/25/2021 03:05:27 PM Mon.

Basic Setup

System Alarms

Battery Setup

Only w/ BMS Lithium Mode

Li-Batt Info

Grid Setup

Solar Today=53KWH Total=559.8KWH

3.80  
KW

2.60  
KW

4.00  
KW

55.2V  
-2.40  
KW

System Alarms 1/25/2021 03:05:27 PM Mon.

Alarms Code	Occurred
F13 Grid_Mode_changed	2021-01-13 11:22
F13 Grid_Mode_changed	2021-01-13 11:20

## Basic Setup

**Basic Setup**

Display Time Advanced Factory Reset Parallel

Brightness

Auto Dim  600S

Beep

CANCEL OK

**Basic Setup**

Display Time Advanced Factory Reset Parallel

AM/PM Year 2021 Month 10 Day 26

Time Sync PM Hour 03 Minute 04 Second 15

Seasons

Start M-D	Season1	Season2	Season3
1 - 1	4 - 1	8 - 1	

CANCEL OK End M-D 4 - 1 8 - 1 12 - 1

**Basic Setup**

Display Time Advanced Factory Reset Parallel

Solar Arc Fault ON  Clear Arc\_Fault

Gen Limit Power 9000W

Load Limit Power 9000W

Grid peak-shaving Power 9000W

Auto detect Home Limit Sensors CT ratio 2000

UPS Time 0ms

CANCEL OK

**Basic Setup**

Display Time Advanced Factory Reset Parallel

Factory Reset  System selfcheck

Lock out all changes  Test Mode

Lock Grid Charging & Limited

CANCEL OK

**Basic Setup**

Display Time Advanced Factory Reset Parallel

Parallel  Master Modbus SN 00  Phase A

Slave  Phase B

Phase C

Meter > Grid  Meter > Load

Meter Select No Meter

CANCEL OK

# Battery Setup

### Batt Setup

**Batt** | Charge | Discharge | Smart Load

Batt Capacity: 200Ah  Use Batt V Charged

Max A Charge: 100A  Use Batt % Charged

Max A Discharge: 185A  No Battery

TEMPCO: -0mV/C/Cell  BMS Lithium Batt 00

Activate Battery

CANCEL OK

### Batt Setup

**Batt** | Charge | Discharge | Smart Load

StartV: 49.0V 49.0V Float V: 54.8V

Start%: 30% 30% Absorbion V: 55.5V

A: 40A 100A Equalization V: 55.5V

30 Days: 0.0 Hours

Gen Charge  Grid Charge

Generator Exercise Cycle Day & Time: Mon 08 :00 20min

Gen Force CANCEL OK

### Batt Setup

**Batt** | Charge | Discharge | Smart Load

Shutdown: 46.0V 20% Batt Resistance: 25mOhms

Low Batt: 47.5V 30% Batt Charge Efficiency: 99.0%

Restart: 52.0V 40%

Batt Empty V: 47.0V  BMS\_Err\_Stop

CANCEL OK

### Batt Setup

**Batt** | Charge | Discharge | Smart Load

Use gen input as load output  For AC Coupled Input to Gen

On Grid always on High Frz: 62.00Hz

Smart Load OFF Batt: 51.0V 80%  AC couple on load side

Smart Load ON Batt: 54.0V 90%

Solar Power(W): 500W

CANCEL OK

# Grid Setup

### Grid Param

Limiters | Sell Control | Grid Input | Freq | Volt | PowFac

Time	Power(W)	Batt	Charge	Sell
01:00AM	2000	50%		
05:00AM	2000	50%		
09:00AM	2000	100%		
01:00PM	2000	100%		
05:00PM	2000	50%		
09:00PM	2000	50%		

CANCEL OK

### Time of Use Setup

Mon.  Tues.  Wed.  Thur.

Fri.  Sat.  Sun.

Season1  Season2  Season3

CANCEL OK

### Grid Param

Limiters | Sell Control | Grid Input | Freq | Volt | PowFac

General Standard

UL1741 & IEEE1547

UL1741SA

Grid Reconnect Time: 60s

Power Factor: 1.000

GEN connect to Grid Input

Zero Export Power: 20W

Batt First  Load First

CANCEL OK

### Grid Param

Limiters | Sell Control | Grid Input | Freq | Volt | PowFac

Grid Frequency:  50Hz  60Hz

Grid Type: 120V

Single Phase

120/240V Split Phase

120/208V 3 Phase

Protect Param:

Grid Vol High: 123V

Grid Vol Low: 114V

Grid Hz High: 62.0Hz

Grid Hz Low: 57.0Hz

CANCEL OK

### Grid Param

Limiters | Sell Control | Grid Input | Freq | Volt | PowFac

L/HVRT  L/HVRT

V	F	V	F
HV2: 252.0V	0.165	HF2: 62.00Hz	0.165
HV1: 231.0V	125	HF1: 60.50Hz	2995
LV1: 184.8V	205	LF1: 58.50Hz	2995
LV2: 147.0V	105	LF2: 57.00Hz	0.165
LV3: 105.0V	0.165		

CANCEL OK

### Grid Param

Limiters | Sell Control | Grid Input | Freq | Volt | PowFac


Q(V)  FW  VW

V	Q	F	V
V1: 216.0V	Q1: 0.44	Fstart: 60.50Hz	Vstart: 254.4V
V2: 225.6V	Q2: 0.00	Fstop: 62.00Hz	Vstop: 264.0V
V3: 254.4V	Q3: 0.00	RT: 5.0s	RT: 10s
V4: 264.0V	Q4: 0.44	Normal Ramp rate: 10.0%/s	Soft Start Ramp rate: 10.0%/s


Response Time: 10s

CANCEL OK

## Sol-Ark Menus

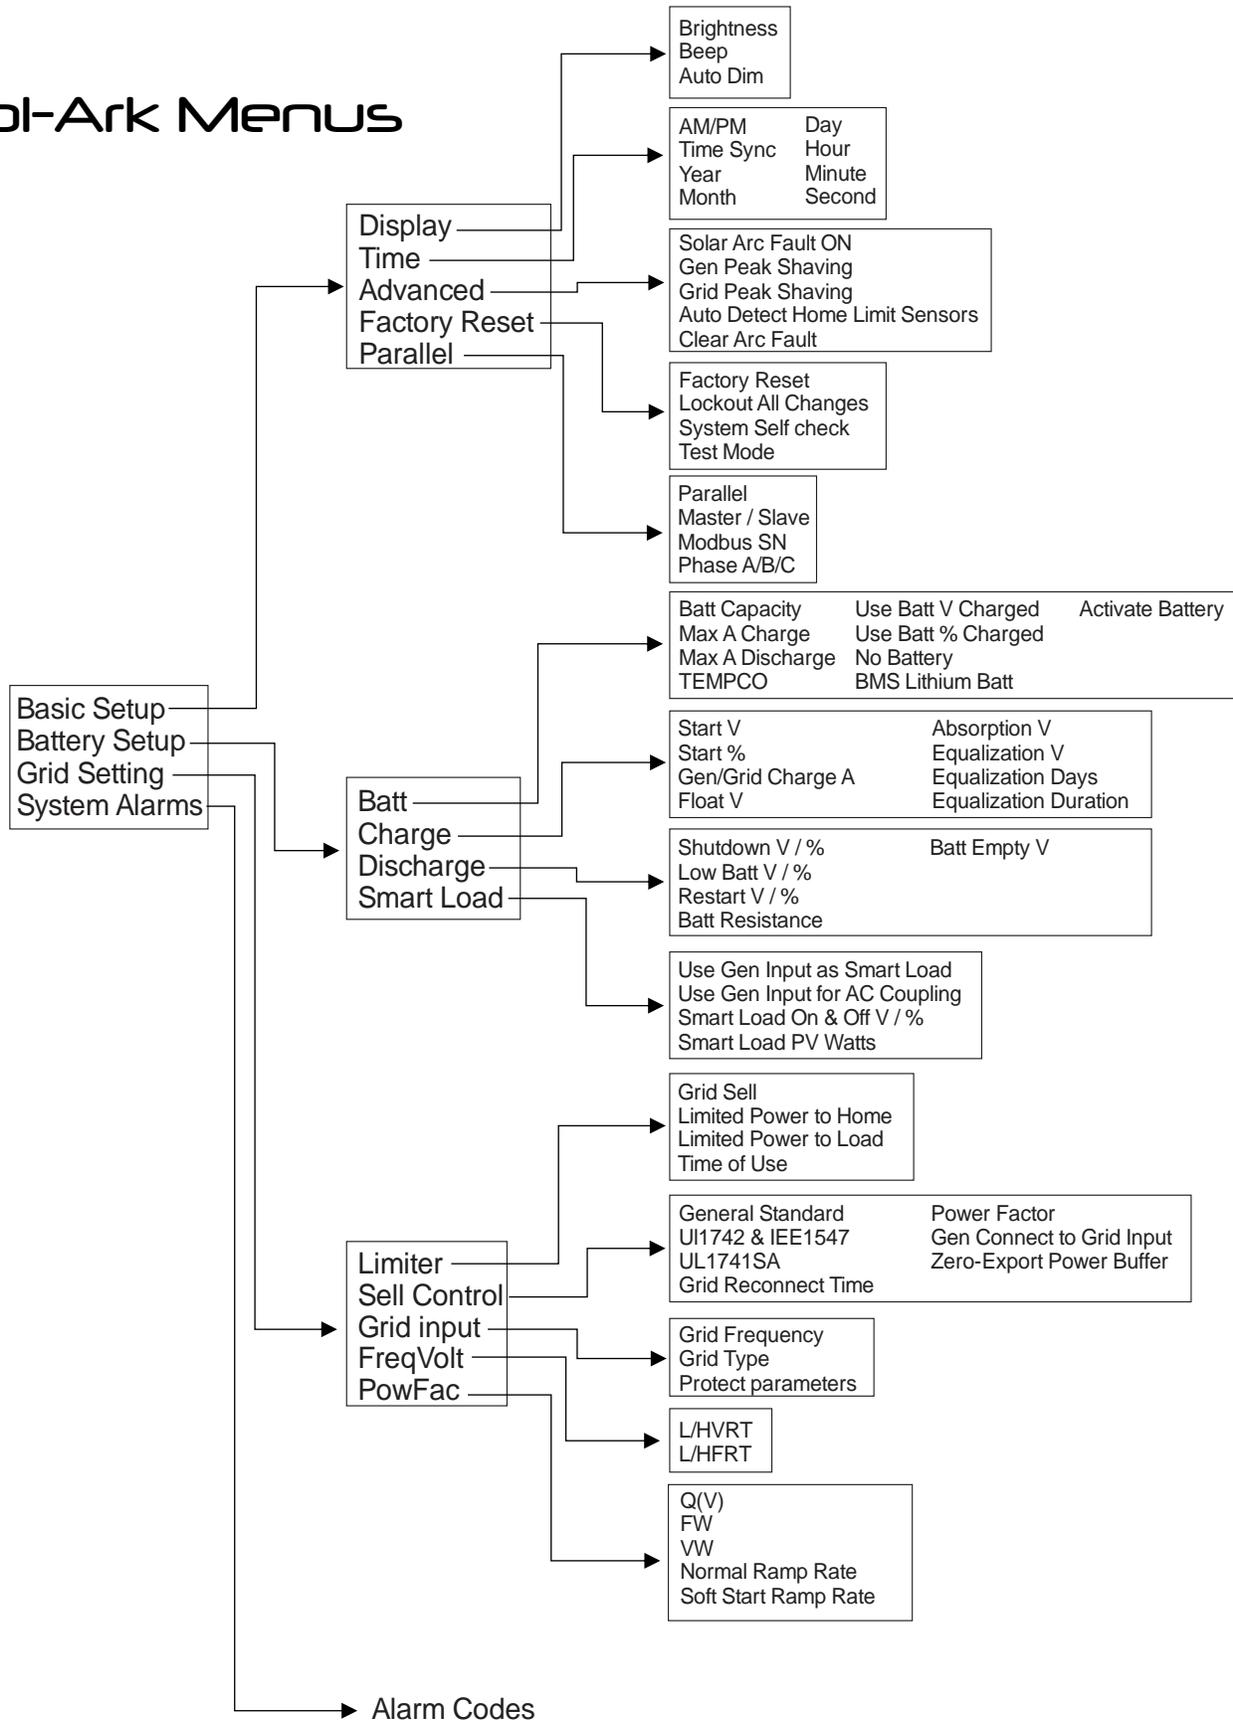

# Main Screens (Touchscreen)

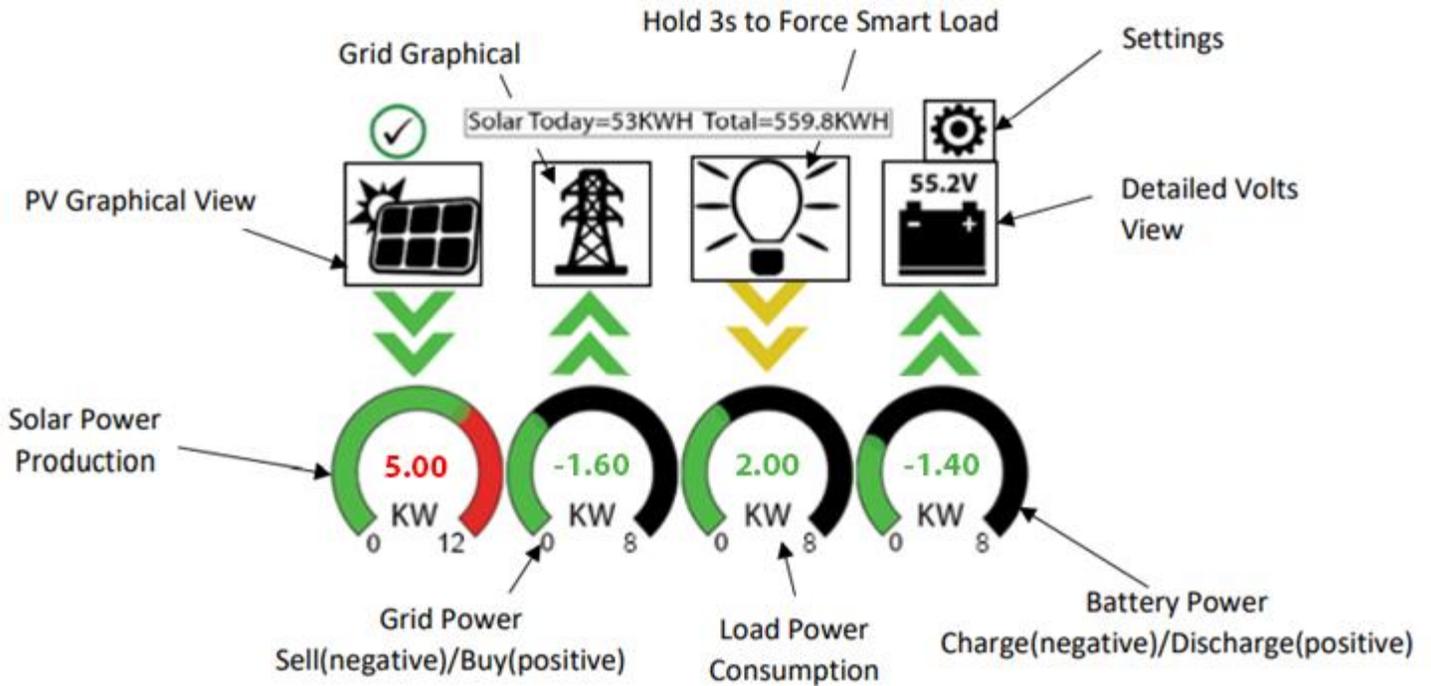

## Detailed Volts View

- Top row = Total power for column
- Middle Row = Line 1/PV1 voltage, Amps, and Watts  
 (note: PV Voltage not to exceed 500V)
- Bottom Row = Line 2/PV2 voltage, Amps, and Watts  
 (note: PV Voltage not to exceed 500V)
- Batt Temperature will show -20°C if the temperature sensor is not connected. Batt SOC % = % batteries are charged
- DC Temp = Temperature of DC conversion electronics
  - Batt → AC
  - PV → Batt
  - AC → Batt
- AC Temp = Temperature of AC conversion electronics
  - Batt → AC
  - PV → AC
- Grid Column
  - If selling to the Grid, Grid Watts = negative
  - If buying from the Grid, Grid Watts = positive
  - HM = power detected by the external current sensors on the entire home
  - LD = power detected using internal sensors on AC grid in/out connections

Solar	Grid	INV	USP LD	Batt
0W	4654W	-4654W	0W	-4248W
	60.0Hz	60.0Hz	119V	59%
M1: 0V	116V	116V		54.23V
0.0A	39.6A	40.7A		-78.34A
0W	HM: 21W			23.0C
M2: 0V	LD: 4654W		<b>Gen</b>	<b>TEMP</b>
0.0A			0V	DC: 36.7C
0W			0.0Hz	AC: 30.2C
			0W	



Note: Reversed Grid Watt values may indicate incorrectly installed current sensor (reversed polarity). See Page 35.

## PV Graphical View

- Displays power production over time for the PV array
- Use up/down buttons to navigate between days
- Month view, Year view, and Total view


## Grid Graphical View

- A. Displays power drawn from and sold to the grid over time
- B. Bars above the line indicate power bought from the grid
- C. Bars below the line indicate power sold back to the grid

This view can help determine when the peak power is used in the Home and for Time of Use programming

## System Setup Menu


- A. ID = LCD serial #. Support uses the Wi-Fi serial #.
- B. COMM = LCD software version
- C. MCU = Inverter software version

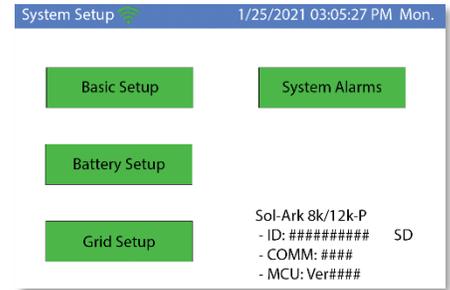

## Basic Setup

### Display

- A. Brightness adjustment
- B. Auto dim (must be enabled for the warranty to cover LCD screen)
- C. Enable/disable BEEP

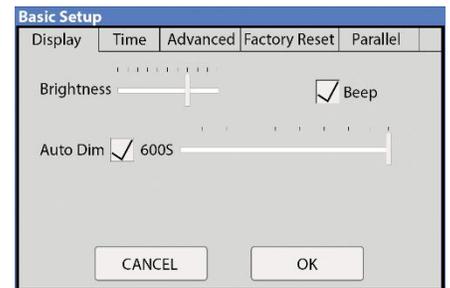

### Time


- A. Set date and time for the system
- B. Set up to 3 seasons for Time of Use to follow

## Gen Peak Shaving (Gen Limit Power)

Set the threshold at which the Sol-Ark will contribute to the generator to prevent large loads overloading the generator

## Load Limit Power

Set the total AC Output of the Sol-Ark, excess power will be curtailed. The default value is always the Maximum output of the inverter

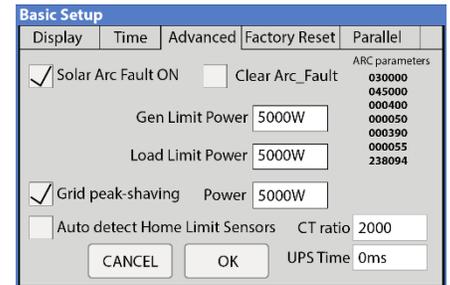

## Grid Peak Shaving

Set the Sol-Ark's threshold to begin contributing power to keep the power drawn from the grid below the threshold

## CT Ratio


Set the CT ratio; Default value is 2000/1. **DO NOT** change this value unless you speak with support, use of 3<sup>rd</sup> party CT sensors requires our permission for one not to **void the warranty**

## UPS Time

Set the delay to Sol-Ark's UPS transfer time; When set to 0ms, the UPS transfer time will be 4ms

## Parallel (connecting multiple systems)

- A. Select parallel mode when using more than one system
- B. Set the Master/Slave status of each system
  - i. Label only one system as the "Master"
- C. Set the MODBUS address of each system starting at 01

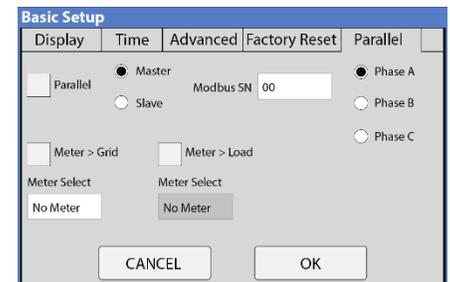

# System Alarms

A. Lists all recorded System alarms in chronological order.

System Alarms		1/25/2021 03:05:27 PM Mon.
Alarms Code	Occurred	
F13	Grid_Mode_changed	2021-01-13 11:22
F13	Grid_Mode_changed	2021-01-13 11:20

# Battery Setup

## Batt

**Batt Capacity:** Enter the size of the battery bank connected to the system. Series = add Voltage | Parallel = add Amp-Hours

**Max A Charge:** Set the max charge rate for the batteries (This also sets PV → Battery charge rate)

 Suggest 20%-30% of battery capacity for lead-acid

**Max A Discharge:** Set max discharge for battery bank (In off-grid mode, the battery bank will discharge 120% of this value for 10 seconds before the inverter shuts down to prevent battery damage)

**TEMPCO:** Temperature coefficient used in conjunction with the batt temp sensor to adjust optimal voltages for lead-acid batteries

**Use Batt V Charged:** Displays battery charge in terms of voltage

**Use Batt % Charged:** Battery voltage can be misleading for determining the % Charged. So, we use algorithms measuring power in and out to measure a true value for % Charged. It also compensates for aging batteries.

## Charge

**Float V:** Set value appropriate for the batteries connected to the system

**Absorption V:** Set value suitable for the batteries connected to the system

- Absorption will stop at 2% of the capacity of the battery bank and drop to float
- Ex: 400Ah battery would be 8A

**Equalization V:** Set value appropriate for the batteries in use

**Days:** The period between equalization cycles

**Hours:** Period taken to equalize batteries

 Note if Hours = 0 system will not equalize the batteries

**Gen Charge:** Uses the gen input of the system to charge the battery bank from an attached generator

**Start V:** Voltage at which system will AutoStart a connected generator to charge the battery bank

**Start percentage:** Percent SOC at which system will AutoStart a corresponding generator to charge the battery bank

**A:** Charge rate from the attached Generator in Amps (DC)

 Size this value according to the generator size

**Grid Charge:** Uses Grid input to charge batteries from grid or generator

**Gen Exercise Cycle (Day & Time):** Set a weekly Gen exercise schedule. (Day of the week/Time/Duration Length) Gen **must** have two-wire start connected to Sol-Ark. To disable the exercise, set the duration length to 0 min.

## Discharge

**Shutdown V:** Battery voltage at which the inverter will shut down (battery symbol on the home screen will turn red)

**Low Batt:** Low battery voltage (battery symbol on the home screen will turn yellow)

**Restart:** Battery voltage at which AC output will resume

**Batt Resistance:** Used in % SOC batt calculations

**Batt Charge Efficiency:** Used in % SOC batt calculations

**Batt Empty V:** Sets reserve capacity and improves % SOC calculations. It is not Batt\_I adjusted



(Recommendations: 45V for AGMs, 48V for Lithium Iron Phosphate)

Batt Setup			
Batt	Charge	Discharge	Smart Load
Shutdown	46.0V	20%	Batt Resistance 25mOhms
Low Batt	47.5V	30%	Batt Charge Efficiency 99.0%
Restart	52.0V	40%	
Batt Empty V	47.0V		<input type="checkbox"/> BMS_Err_Stop
CANCEL		OK	

## Smart Load (Gen Breaker)

- This mode utilizes the Gen input connection as an output that only receives power when the battery exceeds a user-programmable threshold
- Enable "Use gen input as load output" to power high power 120V loads

### Smart Load OFF Batt

Battery voltage at which the Gen Load will stop receiving power

### Smart Load ON Batt

Battery voltage at which the Gen Load will start receiving power

Batt Setup			
Batt	Charge	Discharge	Smart Load
<input checked="" type="checkbox"/>	Use gen input as load output	<input type="checkbox"/>	For AC Coupled Input to Gen
<input checked="" type="checkbox"/>	On Grid always on		High Frz 62.00Hz
Smart Load OFF Batt	51.0V	80%	<input type="checkbox"/> AC couple on load side
Smart Load ON Batt	54.0V	90%	
Solar Power(W)	500W		CANCEL OK



Using Gen load for a water heater, we recommend that only one leg (120V) be connected to the bottom element. This significantly reduces the power consumption of the water heater while retaining core functionality (it will heat water, only slower).



Gen Load is limited to 30A (Do not exceed!)

**Solar Watts** is for on Grid

- The system waits to turn on smart load until enough PV power is produced (when on grid)

## AC Coupling Settings ("For AC Coupled Input")

- To use the Gen input breaker as an AC coupled input, check the "For AC Coupled Input" box (this feature will also work with "Grid-Tied" Inverters)

**B. The meaning of Smart Load OFF Batt and Smart Load ON Batt change in this mode**

**Smart Load OFF Batt:** The SOC at which the AC coupled inverter(s) are shut down when in off-grid mode



90% recommended

**Smart Load ON Batt:** The SOC at which the AC coupled inverter(s) are turned on when in off-grid mode



60%-80% recommended

When On-Grid, the AC-coupled inverter will always be on, and will sell any extra power back to the grid

**AC Coupled PV Arrays will not work WITHOUT grid sell enabled (while grid is available)**

To use the LOAD for AC coupling grid tied inverter(s)

- You must select "For Micro Inverter Input"
- The Gen terminal is not used (even though the GEN terminal is not physically being used for this mode, AC coupling on the LOAD breaker prevents the use of the GEN terminal)
- Wire as show in the preceding example diagram labeled "Load side AC coupling example"



Some load-side AC coupling installs will require a line side tap instead of the 50A breaker shown in the example diagram

## Grid Setup

### Limiter

**Grid Sell:** Maximum watts sold to grid

**Limited Power to Home:** Limits power produced by the system to match the demand of the Home

**Limited Power to Load:** Limits power produced by the system to match the demand of connected loads

**Time Of Use:** Control battery behavior w/ grid available

**Time:** When the system will sell batt/PV power to the Grid or Home

**Power (W):** Max watts called from the battery only at each time

**Batt:** The battery voltage or % at which the system will limit selling to the Grid or Home from the battery. The system will drain the battery until reaching that percent/voltage

**Charge:** Enables grid/gen charging up to the voltage or percentage specified on the line during a selected period. PV will always charge 100%. If using a generator, select the charge box for the times that may need the generator, and the Gen will charge the battery to the voltage of percentage specified in the "Batt" column

**Sell:** The sell check box allows the battery to be discharged for grid sell-back for that time slot

Grid Sell	Time	Power(W)	Batt	Charge	Sell
<input type="checkbox"/> 05000	01:00AM	2000	50%	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/> Limited Power to Home	05:00AM	2000	50%	<input type="checkbox"/>	<input type="checkbox"/>
<input checked="" type="checkbox"/> Limited Power to Load	09:00AM	2000	100%	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/> Time of Use Setup	01:00PM	2000	100%	<input type="checkbox"/>	<input type="checkbox"/>
	05:00PM	2000	50%	<input type="checkbox"/>	<input type="checkbox"/>
	09:00PM	2000	50%	<input type="checkbox"/>	<input type="checkbox"/>



Note: If you need the batteries to never charge from the grid, **uncheck** the "Grid Charge" box under the charge tab of the battery menu.

### Sell Control

**General Standard:** Uses Protect Parameters in table

**UL 1741 & IEEE1547:** Enables sell compliant functionality

**UL1741SA:** Enables wider Freq, Voltage, and Power Factor

**GEN connect to Grid Input:** Enable if Generator connects to the AC Grid breaker

**Zero Export Power:** Power drawn from the grid at all times

General Standard	Grid Reconnect Time
<input type="checkbox"/>	300s
<input type="checkbox"/> UL1741 & IEEE1547	Power Factor
<input type="checkbox"/> UL1741SA	1.000
	<input type="checkbox"/> GEN connect to Grid Input
	Zero Export Power
	20W
	<input type="checkbox"/> Batt First <input type="checkbox"/> Load First

## Grid Input

**Grid Frequency:** Select the Grid Frequency connection

**Grid Type:**

- **120V Single Phase**

**Protect Parameters:** (Settings for when the system will connect/disconnect from the grid. UL 1741 & IEEE1547 do not use these parameters)

 We recommend widening the frequency range when connecting a generator to the grid breaker (55-65Hz)

## Selecting Power Mode

Sol-Ark 5K-1P-N will simultaneously use various power sources available to meet loads demand. The following power modes allow the user to determine the power sources available to the Sol-Ark 5K-1P-N.

### Limited Power to Load / Self Consumption

- Sol-Ark will only power loads connected to it
- It will not produce more power than the connected loads require
- This mode will neither sell back to the Home nor Grid

### Limited Power to Home (Zero-Metering)

Main Menu → System Settings → Grid Setup → Limiter → Limited Power to Home

- Push power to the Home without selling back any excess to the grid (no net metering agreement required)
- This mode requires the use of the limiter sensors
- Power source priority is the same as Grid Sell Back

### Grid Sell

Main Menu → System Settings → Grid Setup → Limiter → Grid Sell

- This mode allows Sol-Ark 5K-1P-N to sell back any excess power produced by the solar panels to the grid

	Time	Power(W)	Batt	Charge	Sell
<input type="checkbox"/> Grid Sell 05000	01:00AM	2000	50%		
<input type="checkbox"/> Limited Power to Home	05:00AM	2000	50%		
<input checked="" type="checkbox"/> Limited Power to Load	09:00AM	2000	100%		
	01:00PM	2000	100%		
<input type="checkbox"/> Time of Use Setup	05:00PM	2000	50%		
	09:00PM	2000	50%		

**Simultaneously select Grid Sell and Limited Power to Home**

Load (light bulb) icon on the home screen now includes both the load breaker power and the home's consumption.

### Power source priority:

- Solar Panels
- Grid
- Generator (Manual)
- Batteries (until reaching programmable % discharge)

### Time Of Use (using batteries during peak power times)

Main Menu → System Settings → Grid Setup → Limiter → Time Of Use

- Use the batteries to reduce power consumption from the grid during a user programable peak pricing time

### Power source priority:

- Solar Panels
- Batteries (programmable % discharge)
- Grid (control when Grid charges)
- Generator

## FreqVolt (UL 1741SA must be enabled in the "Sell Control" tab)

### Puerto Rico Grid Compliance Settings:

Grid Param			
Tab 1	Sell Control	Grid Input	PowFac
<input checked="" type="checkbox"/> L/HVRT		<input checked="" type="checkbox"/> L/HFRT	
HV2: 288.0V	0.16S	HF2: 61.50Hz	10S
HV1: 264.0V	1S	HF1: 60.50Hz	300S
LV1: 211.2V	2S	LF1: 59.20Hz	300S
LV2: 144.0V	1S	LF2: 57.50Hz	10S
LV3: 108.0V	0.16S		
CANCEL		OK	

### Kauai Grid Compliance Settings:

Grid Param			
Tab 1	Sell Control	Grid Input	PowFac
<input checked="" type="checkbox"/> L/HVRT		<input checked="" type="checkbox"/> L/HFRT	
HV2: 288.0V	0.16S	HF2: 64.00Hz	0.16S
HV1: 264.0V	5S	HF1: 63.00Hz	20S
LV1: 204.0V	20S	LF1: 57.00Hz	20S
LV2: 120.0V	0.16S	LF2: 56.00Hz	0.16S
LV3: 110.0V	0.16S		
CANCEL		OK	

Grid Param			
Tab 1	Sell Control	Grid Input	PowFac
<input checked="" type="checkbox"/> Q(V)		<input checked="" type="checkbox"/> FW	<input type="checkbox"/> VW
V1: 225.6V	Q1: 0.44	Fstart: 60.10Hz	Vstart: 254.4V
V2: 232.8V	Q2: 0.00	Fstop: 62.40Hz	Vstop: 264.0V
V3: 247.2V	Q3: 0.00	RT: 0.5s	RT: 10s
V4: 254.4V	Q4: 0.44		
Response Time	10s	Normal Ramp rate	100.0%/s
		Soft Start Ramp rate	0.3%/s
CANCEL		OK	

### HECO Grid Compliance Settings for O'ahu, Maui, Hawai'i:

Grid Param			
Tab 1	Sell Control	Grid Input	PowFac
<input checked="" type="checkbox"/> L/HVRT		<input checked="" type="checkbox"/> L/HFRT	
HV2: 288.0V	0.16S	HF2: 64.00Hz	0.16S
HV1: 264.0V	1S	HF1: 63.00Hz	20S
LV1: 211.2V	20S	LF1: 57.00Hz	20S
LV2: 168.0V	10S	LF2: 56.00Hz	0.16S
LV3: 120.0V	0.16S		
CANCEL		OK	

Grid Param			
Tab 1	Sell Control	Grid Input	PowFac
<input checked="" type="checkbox"/> Q(V)		<input checked="" type="checkbox"/> FW	<input type="checkbox"/> VW
V1: 225.6V	Q1: 0.44	Fstart: 60.10Hz	Vstart: 254.4V
V2: 232.8V	Q2: 0.00	Fstop: 62.40Hz	Vstop: 264.0V
V3: 247.2V	Q3: 0.00	RT: 0.5s	RT: 10s
V4: 254.4V	Q4: 0.44		
Response Time	10s	Normal Ramp rate	100.0%/s
		Soft Start Ramp rate	0.3%/s
CANCEL		OK	

### HECO Grid Compliance Settings for Lana'i and Moloka'i:

Grid Param			
Tab 1	Sell Control	Grid Input	PowFac
<input checked="" type="checkbox"/> L/HVRT		<input checked="" type="checkbox"/> L/HFRT	
HV2: 288.0V	0.16S	HF2: 65.00Hz	0.16S
HV1: 264.0V	1S	HF1: 63.00Hz	20S
LV1: 211.2V	20S	LF1: 57.00Hz	20S
LV2: 168.0V	10S	LF2: 56.00Hz	0.16S
LV3: 120.0V	0.16S		
CANCEL		OK	

Grid Param			
Tab 1	Sell Control	Grid Input	PowFac
<input checked="" type="checkbox"/> Q(V)		<input checked="" type="checkbox"/> FW	<input type="checkbox"/> VW
V1: 225.6V	Q1: 0.44	Fstart: 60.10Hz	Vstart: 254.4V
V2: 232.8V	Q2: 0.00	Fstop: 62.40Hz	Vstop: 264.0V
V3: 247.2V	Q3: 0.00	RT: 0.5s	RT: 10s
V4: 254.4V	Q4: 0.44		
Response Time	10s	Normal Ramp rate	100.0%/s
		Soft Start Ramp rate	0.3%/s
CANCEL		OK	

### PowFac

Power Factor is programmable from 0.8 – 1.0

The CT Sensor enables **Limited Power to Home** mode (meter zero) and **Grid Peak Shaving** mode. The CT sensor also allows the system to calculate loads powered upstream of the Grid Breaker in the home.


## CT Sensor Install Location

- The CT sensor should be installed on L1 upstream of everything in the home except for a Generator Transfer Switch, Knife Blade Disconnect or Bypass Transfer Switch (upstream of Main Service Panel and Line-Side Tap – see Diagrams Section)

## CT Sensor Size


- Each inverter includes a 5/8" CT sensor (fits up to 2/0 AWG service wires)
- There are 15/16" (up to 4/0 AWG) and 2" sensors available for purchase if needed
- Dimensions refer only to CT sensor hole size, contact Sales at (972) 575-8875 Ext 1 to purchase larger sensors

CT Sensor Extension Example

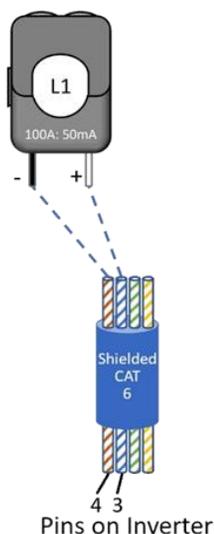

## CT Sensor Wiring

- CT sensor on L1 should be wired to pins 3 (white) and 4 (black)
- White and black wires for each sensor should be twisted along length of run
- If needed, wires can be extended using Shielded Cat 6 (use both wires of twisted pair)

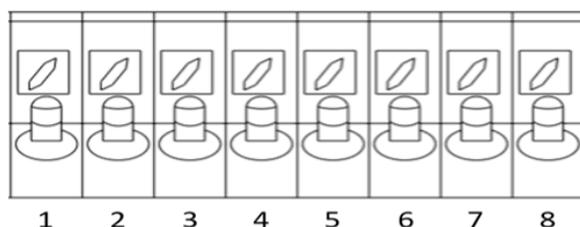

## CT Sensor Direction

- There is an arrow embossed on the CT sensor housing to determine direction
- Install pointing upstream to the service meter

## Peak Shaving Mode

Grid Peak Shaving is available with the CT sensor in the location described above and applicable direction



## CT Ratio

Set the CT ratio; Default value is 2000/1. **DO NOT** change this value unless you speak with technical support, 3<sup>rd</sup> Party CT sensors require our permission to not void warranty.

# Limiter Sensor Automatic Setup

Requires Batteries, AC coupled panels must be off while detecting, and does **NOT** work for 208V installs.  
 If you do not have batteries: verify CT sensor placement manually.

- Install the limiter sensor as previously described (shown in all diagrams as well). Battery and grid connections also required before starting auto-setup.
- Navigate to the "Advanced" Tab of the Basic Setup screen (follow the directions below to get there).  
 Touch the gear icon → Touch the Basic Setup button → Select the Advanced tab (see Fig. C)
- Select "Auto detect Home Limit Sensors" and press "OK".
- Wait for the Sol-Ark to finish its learning process (Sol-Ark will alternate sell back between legs and magnitude automatically determining the correct settings for the sensors).
- Verify sensor was correctly configured (see Fig. D) if it is not correct, repeat the learn function.

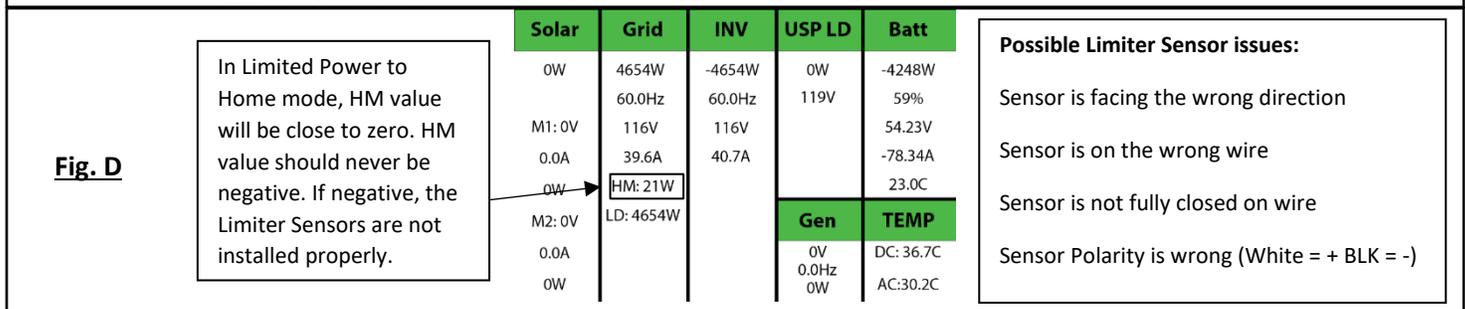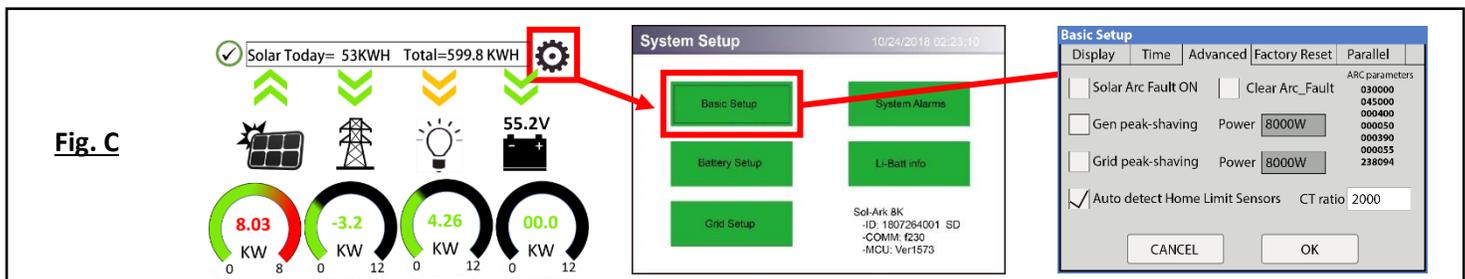

### Verifying proper sensor direction:

- Any loads in the home will show a positive HM (+) value in Watts
- Turning on solar panels and enabling Grid Sell should show a negative HM (-) in Watts if you are producing more power than the loads are consuming
- If you turn on Limited Power to Home mode, then HM: ~0 Watts to zero the meter (system matches the loads to within 99%)




If you installed the limiter sensor (CT) for Limited Power to Home selling mode, verifying the proper sensor placement and direction is critical. Remove the sensor from the main L1 connection, and the power should drop to 0W.



## Off-Grid Install Tips

Sol-Ark 5K-1P-N will automatically operate in Off-Grid Mode without the grid (under the same power priority as TOU).

- A. The Limiter Sensor is not required for completely Off-Grid installs unless using Grid Peak Shaving with a Gen connected to the Grid input.
- B. The Grid input on the Sol-Ark should be used as the Generator input so that you maintain Smart Load output capability when off-grid. Smart Load will allow you to run high-power non-essential appliances (hot water, dehumidifier, heat pump, irrigation pump) on solar power instead of batteries. Therefore, you will use Grid Charge (default) in the Battery Setup/Charge menu.
- C. When off-grid, there is no need for a transfer switch: connect the load output of the Sol-Ark to the whole home.
- D. Do not use Grid Sell or Limited Power to Home modes. Only Limited Power to Load (default).
- E. The Auto Generator start functions as a 2-wire switch (closes the circuit when needing charging)
  - i. Auto Gen-start will be triggered when the battery voltage or percent reaches the level programmed in the battery setup menu. Then, the generator will continue to charge the batteries until they are about 95% full (this percentage is not programmable) before turning the generator off.
  - ii. When using the Sol-Ark to control a generator, an exercise function will turn on the generator once a week on Monday mornings at 8 AM

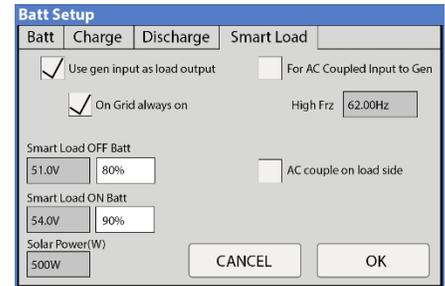

- F. We recommend changing the "Grid Reconnect Time" under the Sell control tab of the grid setup menu to 30 seconds; otherwise, the Sol-Ark will not charge from the generator until it has been on for at least 5 minutes per the default value of 300 seconds.
- G. Under setup for Grid/Sell Control, select General Standard and "GEN connect to Grid Input." Then go to Grid input to widen the input frequency range to 55-65Hz to work with any frequency generator.
- H. If you want to use a wind turbine in conjunction with the Sol-Ark 5K-1P-N, the turbine must have a 48V charge controller with a dump load to prevent overcharging the batteries. Connect the charge controller on the turbine to the battery bank the Sol-Ark uses, and the turbine will help charge the batteries. The Sol-Ark will need to be in "Use Batt V Charged" in the battery setup.
- I. Do not forget to set the Battery capacity and reasonable charge rates.

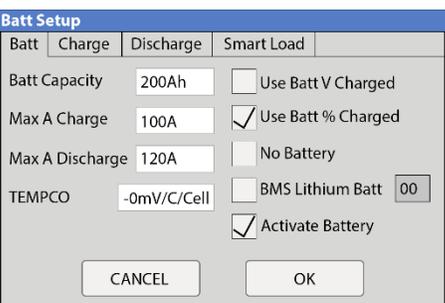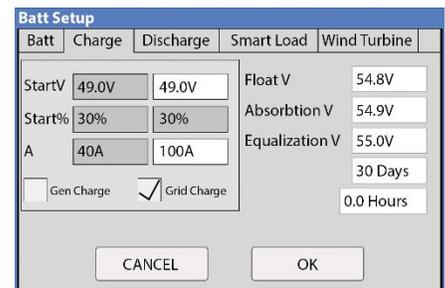

## Grid-Tie / No Battery Install Tips

- A. Under Battery setup, select no Battery & disable Activate Battery (or the system will beep).
- B. Note: a whole system power cycle may be required when changing the battery to no battery settings or no battery to batteries.
- C. Under Grid Setup, select Grid Sell.
- D. Touch Battery Icon to see the Detailed Volts View to verify your inputs & outputs.

Solar	Grid	INV	USP LD	Batt
0W	4654W	-4654W	0W	-4248W
	60.0Hz	60.0Hz	119V	59%
M1: 0V	116V	116V		54.23V
0.0A	39.6A	40.7A		-78.34A
0W	HM: 21W			23.0C
M2: 0V	LD: 4654W		<b>Gen</b>	<b>TEMP</b>
0.0A			0V	DC: 36.7C
0W			0.0Hz	AC: 30.2C
			0W	

## Battery Charging Information

### 4-Stage Charging

The MPPT has a 4-stage battery charging algorithm for rapid, efficient, and safe battery charging. The figure below shows the stage sequence.

#### Bulk Charge Stage


In the Bulk Charge stage, the battery is not at a 100% state of charge and has not yet reached the Absorption voltage setpoint. The controller will deliver 100% of available solar power to recharge the battery.

#### Absorption Stage

When the battery has reached the absorption voltage setpoint, we use constant-voltage regulation to maintain battery voltage at the absorption setpoint, preventing heating and excessive battery gassing. The battery is allowed to come to full state of charge at the absorption voltage setpoint. Absorption lasts until batteries charge at 2% of the programmed Ah size.

#### Float Stage

After the Absorption stage charges the battery fully, the MPPT reduces the battery voltage to the float voltage setpoint. If batts have 100% charge, there can be no more chemical reactions, and all the charging current turns into heat and gassing. The float stage provides a meager rate of maintenance charging while reducing the heating and gassing of a fully charged battery. The purpose of float is to protect the battery from long-term overcharge.

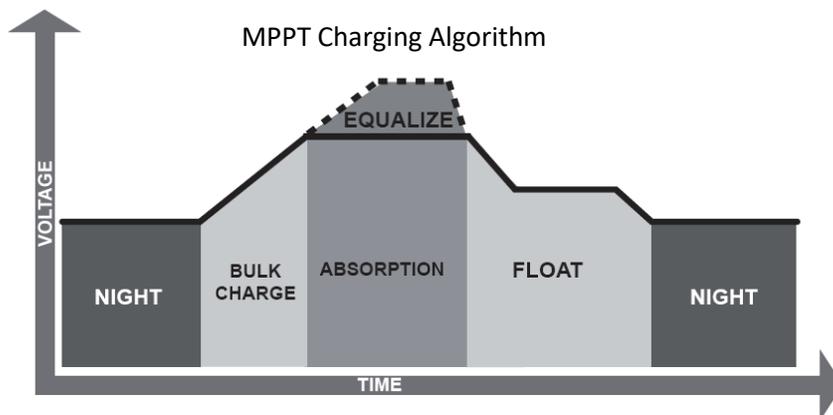

### Battery Charging Setpoint Examples (48V)

Battery Type	Absorption Stage	Float Stage	Equalize Stage (every 30 days 3hr)
AGM / PCC	14.4v (57.6v)	13.5v (53.6v)	14.4v (57.6v) Default
Gel	14.1v (56.4v)	13.5v (54.0v)	
Wet	14.7v (59.0v)	13.7v (55.0V)	14.7v (59.0v)
Lithium	14.1v (54.6v)	13.2v (54.3v)	14.1v (54.6v)



- Batteries in series: ADD VOLTAGES
- Batteries in parallel: ADD AMP-HOURS

## Calculating Battery Bank's Amp-Hours (PCC 230)

Battery Count	Voltage / Battery	Amp Hours / Battery	Total Amp Hours @48V	Max Charge/ Discharge Amp
4	12V	230Ah	230Ah	100A
8	12V	230Ah	460Ah	120A
12	12V	230Ah	690Ah	120A
16	12V	230Ah	920Ah	120A

### Sol-Ark PCC-230 Battery

Batt Capacity: 230Ah x #Parallel\_Batteries  
 (1 parallel = 4 Batt in series, 2 = 8 Batt, 3 = 12 Batt, 4 = 16 Batt)  
 Max A Charge: 100A x #Parallel\_Batteries  
 Max A Discharge: 100A x #Parallel\_Batteries  
 Max A Grid Charge: 50A x #Parallel\_Batteries  
 TEMPCO: -5mV/C/Cell  
 Float V: 53.6V  
 Absorption V: 57.6V  
 Equalization V: 57.6V  
 Equalization Days: 30  
 Equalization Duration: 3 Hours  
 Recommended Shutdown V / Percentage: 47.0V & 20%  
 Recommended Low Batt V / Percentage: 47.5V & 35%  
 Recommended Restart V / Percentage: 52.0V & 50%  
 Battery Resistance: 35mOhms (8 Batt) or 25mOhms (16 Batt)  
 Battery Charge Efficiency: 99%  
 Battery Empty Voltage: 45V

Time	Watts	SOC	GridCharge
1:00AM	1500*Par_Batts	70%	
5:00AM	1500*Par_Batts	70%	
9:00AM	1500*Par_Batts	70%	
1:00PM	1500*Par_Batts	100%	
4:00PM	1500*Par_Batts	70%	
9:00PM	1500*Par_Batts	70%	

These settings will charge the batteries off solar only. Discharge the batteries down to a maximum of 70% full.

Limited Power to Home mode will not sell to the grid from the batteries (only the home will use battery power). The 100% time slot is to ensure that the batteries are properly cycled each day.

### Generation 2 Fortress Battery-eVault18.5

Batt Capacity: 360Ah x #Parallel\_Batteries  
 Max A Charge: 120A (100A for life) x #Parallel\_Batteries  
 Max A Discharge: 120A x #Parallel\_Batteries  
 Max A Grid Charge: 100A x #Parallel\_Batteries  
 TEMPCO: 0mV/C/Cell  
 BMS Lithium Batt: 04  
 Float V: 54.2V  
 Absorption V: 54.4V  
 Equalization V: 55.5V  
 Equalization Days: 30  
 Equalization Duration: 1 Hours (tops off battery)  
 Recommended Shutdown V / Percentage: 51.3V & 20%  
 Recommended Low Batt V / Percentage: 51.7V & 30%  
 Recommended Restart V / Percentage: 51.9V & 40%  
 Battery Resistance: 5mOhms  
 Battery Charge Efficiency: 99%  
 Battery Empty Voltage: 45V

Time	Watts	SOC	GridCharge
1:00AM	5000	40%	
5:00AM	5000	40%	
9:00AM	5000	40%	
1:00PM	5000	40%	
5:00PM	5000	40%	
9:00PM	5000	40%	

These settings will charge the batteries off solar only. Discharge the batteries down to a maximum of 40% full.

Limited Power to Home mode will not sell to the grid from the batteries (only the home will use battery power).

**Simpliphi Power: PHI 3.8 Battery 48V**

Batt Capacity: 75Ah x # Batt  
Max A Charge: 37.5A x # Batt (20A for better lifespan)  
Max A Discharge: 37.5A x # Batt (34A for better lifespan)  
Max A Grid Charge: 20A x # Batt  
TEMPCO: 0mV/C/Cell  
BMS Lithium Batt: Not Selected  
Float V: 55.6V  
Absorption V: 56V  
Equalization V: 56V  
Equalization Days: 30  
Equalization Duration: 2 Hours (tops off battery)  
Recommended Shutdown V / Percentage: 50.2V & 20%  
Recommended Low Batt V / Percentage: 50.6V & 30%  
Recommended Restart V / Percentage: 51.0V & 40%  
Battery Resistance: 24mOhms ÷ (battery Count)  
Battery Charge Efficiency: 99%  
Battery Empty Voltage: 46V

Time	Watts	SOC	GridCharge
1:00AM	1000*Batts	40%	
5:00AM	1000*Batts	40%	
9:00AM	1000*Batts	40%	
1:00PM	1000*Batts	40%	
5:00PM	1000*Batts	40%	
9:00PM	1000*Batts	40%	

These settings will charge the batteries off solar only.  
Discharge the batteries down to a maximum of 40% full.  
  
Limited Power to Home mode will not sell to the grid from the batteries (only the home will use battery power).

**Blue Ion 2.0 Battery**

Batt Capacity: 40Ah x #Parallel\_Batteries  
(4 Parallel = 160Ah, 6 = 240Ah, 8 = 320Ah)  
Max A Charge: 120A w/ 4+ Batteries  
Max A Discharge: 120A w/ 4+ Batteries  
Max A Grid Charge: 120A w/ 4+ Batteries  
TEMPCO: 0mV/C/Cell  
BMS Lithium Batt: 03 (eGauge) / 00 (Namaka Box)  
Float V: 55.2V  
Absorption V: 55.2V  
Equalization V: 55.2V  
Equalization Days: 30  
Equalization Duration: 1 Hours (tops off battery)  
Recommended Shutdown V / Percentage: 47.0V & 20%  
Recommended Low Batt V / Percentage: 49.0V & 30%  
Recommended Restart V / Percentage: 52.0V & 40%  
Battery Resistance: 5mOhms  
Battery Charge Efficiency: 99%  
Battery Empty Voltage: 46V

Time	Watts	SOC	GridCharge
1:00AM	5000	40%	
5:00AM	5000	40%	
9:00AM	5000	40%	
1:00PM	5000	40%	
4:00PM	5000	40%	
9:00PM	5000	40%	

These settings will charge the batteries off solar only.  
Discharge the batteries down to a maximum of 40% full.  
  
Limited Power to Home mode will not sell to the grid from the batteries (only the home will use battery power). The 100% time slot is to ensure that the batteries are properly cycled each day.

**Dyness B4850 Battery Module**

Batt Capacity: 50Ah x #Parallel\_Batteries  
Max A Charge: 50A (25A for life) x #Parallel\_Batteries  
Max A Discharge: 50A x #Parallel\_Batteries  
Max A Grid Charge: 50A x #Parallel\_Batteries  
TEMPCO: 0mV/C/Cell  
BMS Lithium Batt: 01  
Float V: 53.8V  
Absorption V: 54.0V  
Equalization V: 54.0V  
Equalization Days: 30  
Equalization Duration: 1 Hours (tops off battery)  
Recommended Shutdown V / Percentage: 47V & 20%  
Recommended Low Batt V / Percentage: 48V & 30%  
Recommended Restart V / Percentage: 49V & 40%  
Battery Resistance: 5mOhms  
Battery Charge Efficiency: 99%  
Battery Empty Voltage: 46V

Time	Watts	SOC	GridCharge
1:00AM	2400*Par_Batts	40%	
5:00AM	2400*Par_Batts	40%	
9:00AM	2400*Par_Batts	40%	
1:00PM	2400*Par_Batts	40%	
5:00PM	2400*Par_Batts	40%	
9:00PM	2400*Par_Batts	40%	

These settings will charge the batteries off solar only.  
Discharge the batteries down to a maximum of 40% full.  
  
Limited Power to Home mode will not sell to the grid from the batteries (only the home will use battery power).

## MODBUS/RJ45 Application Note

### BMS Lithium Batt Modes (Subject to Change):

00: CANBus Battery mode – Inverter also acts a ModBus slave with slave ID set by “ModBus SN Setting”

01: Storz ModBus Protocol

02: Pylontech ModBus Protocol

03: Old Blue Ion + eGauge / Polarium ModBus Protocol

04: Fortress Power ModBus Protocol

05: Kilovault HAB ModBus Protocol

06: Battery or Battery Controller is ModBus master and writes battery data to inverter’s BMS registers (not currently in use).



Find our full list of currently supported battery communications

[www.sol-ark.com/battery-partners](http://www.sol-ark.com/battery-partners)

Our Battery Communications Integration Guide can also be found here


[www.sol-ark.com/support](http://www.sol-ark.com/support)

**Use the information below at your own risk; the warranty will not cover any damage caused by the improper use of the communications protocols.** Read-Only Modbus Map available upon request at [support@sol-ark.com](mailto:support@sol-ark.com)


#### Combined RS-485 and CANBus

Pin 1 or 8 is RS-485 B- (Data -)  
Pin 2 or 7 is RS-485 A+ (Data +)  
Pin 4 CAN High  
Pin 5 CAN Low  
Pin 6 is GND

Baud 9600  
8bits data  
One stop bit, no parity  
Does not require termination

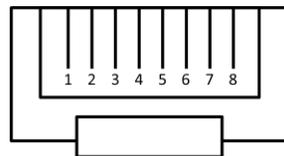

End View

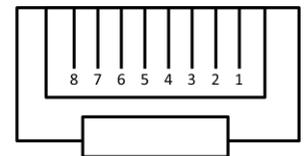

Looking Into Connector

### Incorporating 3<sup>rd</sup> Party ModBus Devices:

If your device utilizes BMS Lithium Batt 00, you need to set the inverter Modbus SN to 01. The default ModBus SN is 00.

## LCD is not powering on

- Check all connections- at least one of the following power sources is required: PV/Grid/Battery.
- Try pressing the power button, touchscreen, or navigation buttons.

## Panels are connected, but DC Light is not on

- PV voltage must be 150V-425V | It's night.

## Panels are not producing

- Check for proper wiring on all solar panel connections.
- Turn PV disconnect "ON".
- Check that the PV input voltage is not greater than 425V.
- If the system says PV = 0V, check PV polarity.

## Panels are not producing much power

- PV Wire Strip Length: 5/8". Your batteries are charged; you can test Grid Sell to verify.

## The system does not keep batteries charged

- Check the charge setting in the Charge Menu.

## Auto Gen-Start not working

- Check to make sure your generator is compatible with Auto Start.
- Make sure that the Auto Gen Start wire is adequately connected to the Sol-Ark 5K-1P-N and the generator.

## Normal LED isn't on

- Sol-Ark 5K-1P-N is in pass-through-only mode, only a Grid connection.
- Sol-Ark 5K-1P-N is not working correctly (Call us).

## The alarm light is on

- Check the system alarms menu to identify the alarm.

## Grid HM value is negative when it should be positive (only applies in limited home mode)

- Limiter Sensor is backward, L1 sensors is swapped, or incorrectly wired L1 sensors. Try Auto Learn.

## AC Overload Fault or Bus Unbalance Fault

- Check Transfer Switch/Subpanel wiring.
- Check for large loads that consume more than the inverter rating (EX: AC units over 3 tons).

## The system connects to grid and quickly disconnects

- With a DMM, verify your Neutral wire connection (should be 0 Vac referenced to GND).
- Check your Freq is set to 60Hz, and the 5K-1P-N measures 120V on L1 vs. N.
- If overloading: verify 120V grid input and load output wires are not swapped.

## DC Overload Fault

- Check PV voltage.
- Make sure you have not wired more than two (2) solar strings in parallel.

## System is beeping

- Check the system alarms menu to see which alarm has been triggered. Most alarms will self-reset.
- There is no battery connected. If not using a battery, select no battery and disable activate batt in Batt menu.
  - Turn off the center button, remove AC Grid and PV Power for the 30s (screen is dead), and then power up to fully reset the system.

### Battery cable sparks when connected

- Put a battery breaker in the off position before connecting or disconnecting batteries. A pre-charge resistor can also be utilized.

### Battery symbol on the home screen is red

- The battery is under-Voltage or over-Voltage

### Battery symbol on the home screen is yellow

- The battery is low, or the charge/discharge current is close to the programmed limit (which is ok)

### Grid symbol on the home screen is yellow

- Grid parameters are out of specified range or grid is down

### System has restarted

- It happens if the system is overloaded, battery voltage is greater than 63V, or Software update

### Batteries were connected backward

- It can cause damage! Turn off the system or disconnect the batteries and inspect.

### Why is the LCD screen still on when the power button is off?

- If PV or Grid power, LCD stays on, but the inverter and loads are off.

### The Batt % meter is not reaching 100%

- The system needs to go through a small discharge/charge cycle first to calibrate the battery


### Generator setup is reading 0Hz

- Select "General Standard" instead of UL1741. Then widen the frequency range to 55Hz-65Hz.

### Color Touchscreen is Frozen

- Press and hold the escape button [←] for 7-10 seconds

## Troubleshooting Phasing Issues

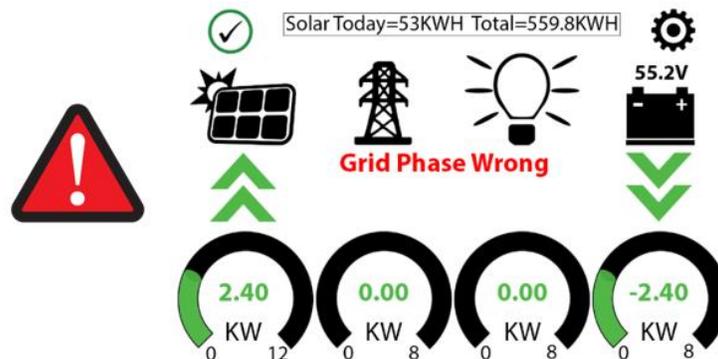

If the Sol-Ark screen shows the above error, there is a phasing issue with your wiring, and it may cause overload faults (F18, F26, F34) even with the Load breaker **off** and **WILL CAUSE DAMAGE if left unchecked**.

Single Sol-Ark: To locate the improperly wired phases, measure *L1* to **L1 (Top Screws)** between the *Grid* and **Load** breaker; you should see 0V AC. Attempt to correct the wiring until you only read 0V AC between *L1* and **L1**.

Make sure to correct both the Grid and Load wiring; they both need to be correct.

If the error persists, you will need to check your AC wiring beyond the inverter and may also need to verify that the phases are properly labeled coming from your meter.

## Sol-Ark 5K-1P-N Error Codes

Fault	Instruction	Common Cause/Remedy
F1	DC Inversed Failure	If you have parallel systems and turn one system off, you will get this notification. Not a fault.
F8	GFDI_Relay_Failure	Current Leakage from inverter AC output to Ground, check Ground and neutral are connected at the main panel
F13	Grid_Mode_change	It can happen when not using batteries or if Grid Input settings are changed. This is a notification, NOT a fault. If you switch from No Batt to Battery mode, Power the System down completely to restart.
F15	AC_OverCurr_Failure	It is usually caused by Loads too large for the inverter. If off-grid, the battery discharge amps are programmed too low. Overloads can result in F15, F18, F20, or F26.
F16	GFCI_Failure	Ground fault. Check PV+ or PV- wiring (which must be ungrounded). Exposed PV conductors + rain can also cause. Check that the neutral line and Ground are not double-bonded (common with portable generators).
F18	Tz_Ac_OverCurr_Fault	Overloaded the Load Output: reduce loads. Wiring Short on the AC Side can also cause this error. Overloads can result in F15, F18, F20, or F26.
F20	Tz_Dc_OverCurr_Fault	It is typically caused by DC current from the battery that is too large (ex: 4 Ton AC Unit). Overloads can result in F15, F18, F20, or F26.
F22	Tz_EmergStop_Fault	Initiated Emergency Stop; see sensor pinout table.
F23	Tz_GFCI_OC_Fault	PV Ground fault. Check PV+ or PV- wiring (which must be ungrounded, or damage can occur). Typically caused by pinched PV wire grounding the PV+ or PV-. Grounded PV wire can cause F20, F23, or F26.
F24	DC_Insulation_Fault	An exposed PV conductor combined with moisture is faulting (can cause F16, F24, F26).
F25	AC_Active_Batt_Fault	No battery connection to the Inverter, and Activate Battery is enabled. Disable Activate Battery in settings while no battery is connected.
F26	BusUnbalance_Fault	Too much load on one leg (L1 or L2) Vs. the other leg or DC loads on the AC output when off-grid. Grounded PV wire can cause F20, F23, or F26.
F29	Parallel_CANBus_Fault	Usually, a communication error for parallel systems, check cables, and MODBUS addresses
F30	AC_MainContactor_Fault	Contact Sol-Ark.com
F31	Soft_Start_Failed	Soft Start of large motor failed
F34	AC Overload Fault	AC Overload or load shorted. Reduce heavy loads.
F35	AC_NoUtility_Fault	Grid connection lost
F37	DCLLC_Soft_Over_Cur	Software DC overcurrent
F39	DCLLC_Over_Current	Hardware DC overcurrent
F40	Batt_Over_Current	Batteries exceeded their current discharge limit
F41	Parallel_System_Stop	If one system faults in parallel, this normal fault will register on the other units as they disconnect from grid
F45	AC_UV_OverVolt_Fault	Grid under voltage causes a disconnect. This will self-reset when the grid stabilizes.
F46	Parallel_Aux_Fault	Cannot communicate with other parallel systems. Check Master = 1, Slaves are 2-9, ethernet cables are connected.
F47	AC_OverFreq_Fault	Grid over Frequency (common in power outages) causes a disconnect. Will self-reset when grid stabilizes.
F48	AC_UnderFreq_Fault	Grid under Frequency (common in power outages) causes a disconnect. Will self-reset when grid stabilizes.
F55	DC_VoltHigh_Fault	PV may be higher than 500V. Battery voltage should not be above 59V or 63V (depending on the model).
F56	DC_VoltLow_Fault	Batteries are overly-discharged, or Lithium BMS has shut down. If battery settings are off, this can also happen.
F58	BMS communication fault	Sol-Ark is programmed to BMS Lithium Battery Mode but cannot communicate with a BMS
F60	Gen_Volt_or_Fre_Fault	Generator Voltage or Frequency went outside the allowable range
F61	Button_Manual_OFF	The parallel Slave system turned off without turning off Master
F63	ARC_Fault	It can be a lousy PV connector/connection. And sometimes a false alarm due to powerful lightning storms.
F64	Heatsink_HighTemp_Fault	Check the built-in fans are running; the ambient temp may be too high

**For installer to complete AFTER the system is operational. The purpose is to protect the installer, homeowner, and inverter.**

1. Is the 5K-1P-N installed in a location where the **LCD is protected from direct sunlight** and has 2" clearance left and right for spacing and 6" above and below for cooling Y/N
2. Are all the battery lugs tightened? Y/N
3. 5K-1P-N should connect to grid, 5K-1P-N load/Grid breakers ON, batteries connected, PV input on and ON button on. With the inverter running the Backup load's panel and Grid-connected:
  - A. Did any breakers trip? Y/N
  - B. Did inverter overload? Y/N
4. If you have problems, please take pictures of these and email to: support@ Sol-Ark.com
  - A. **Battery icon screen, showing detailed voltages (the screen shown below)**
  - B. **Sol-Ark 5K-1P-N with batteries and of user wiring area**
5. Load and solar test
  - A. Press the battery icon for the detailed voltages screen.
  - B. Is batt temp sensor working? Y/N
  - C. Turn on many loads for the Backup circuits. Are solar panels producing enough power to match the load (provided there is enough sun)? Y/N
  - D. Program Full Grid Sell Mode. If there are enough panels and sun or light loads in the entire house, the Grid HM measurement will be negative on L1. Is it negative (solar selling back to grid)? Y/N
  - E. Program limited power to home mode. The Grid HM sensor will be near zero or slightly positive. Is it near zero and canceling out the whole home power? Y/N
  - F. You have verified the limit sensor is correctly installed. An auto-learn function corrects any mistakes in CT limiter wiring (provided you have batteries and in 120/240V). Program in the correct Grid mode the customer will use.
6. Did you program the correct Ah for the battery bank and max Amps charge/discharge? Y/N
7. Did you program the correct battery charge voltages for your battery type? Y/N
8. **Turn off the AC breaker, so 5K-1P-N is operating in an off-grid mode for several minutes.** Are appliances still powered? Y/N
9. **Turn off PV input, running only on batteries for several minutes.** Are appliances still powered? Y/N
10. Turn on PV input and AC Grid inputs.
11. Did you set up the Wi-Fi plug to the customer's internet? Y/N
12. Absolutely important for software updates. Did you help the customer register system on Monitoring App? Y/N
13. Does the customer have a standby generator or a small portable Generator? Y/N
  - A. Did you turn off UL1741/IEEE1547 (use General Standard) and reprogram grid freq. range to 55-65Hz? Y/N
  - B. Did you enable Gen charging and adequately set the charge current if using a small gas generator on Gen inputs? Y/N



**This checklist must be filled out and submitted to register your warranty. Please visit:**

<https://www.sol-ark.com/register-your-sol-ark/>

\_\_\_\_\_  
Installer Name

\_\_\_\_\_  
Installer Signature

\_\_\_\_\_  
Date

\_\_\_\_\_  
Customer Name

\_\_\_\_\_  
Customer Signature

\_\_\_\_\_  
Date

5-Year Limited Warranty for SOL-ARK (Portable Solar LLC) Products. Sol-Ark provides a 5-year limited Warranty ("Warranty") against defects in materials and workmanship for its Sol-Ark products ("Product"). The term of this warranty begins on the Product(s) initial purchase date or the date of receipt of the Product(s) by the end user, whichever is later. This must be indicated on the invoice or bill of sale from your installer. This warranty applies to the original Sol-Ark Product purchaser and is transferable only if the Product remains installed in the original use location. Please call Sol-Ark to let us know if you are selling your Home and give us the name and contact of the new owner.

The warranty does not apply to any Product or Product part that has been modified or damaged by the following:

- ❖ Installation or Removal (examples: wrong voltage batteries, connecting batteries backward, damage due to water/rain to electronics, preventable damage to solar wires.)
- ❖ Alteration or Disassembly
- ❖ Normal Wear and Tear
- ❖ Accident or Abuse
- ❖ Unauthorized Firmware updates/software updates or alterations to the software code
- ❖ Corrosion
- ❖ Lightning: unless using EMP hardened system, then Portable Solar will repair the product
- ❖ Repair or service provided by an unauthorized repair facility
- ❖ Operation or installation contrary to manufacturer product instructions
- ❖ Fire, Floods, or Acts of Nature
- ❖ Shipping or Transportation
- ❖ Incidental or consequential damage caused by other components of the power system
- ❖ Any product whose serial number has been altered, defaced, or removed
- ❖ Any other event not foreseeable by Portable Solar, LLC

**Contact Us: 1-972-575-8875**

**For Info/Purchasing:**  
[sales@sol-ark.com](mailto:sales@sol-ark.com) | ext.1

**For Tech Support/Warranty Claim:**  
[support@sol-ark.com](mailto:support@sol-ark.com) | ext.2

**For Administrative Help:**  
ext.3

Sol-Ark (Portable Solar LLC) liability for any defective Product, or any Product part, shall be limited to the repair or replacement of the Product, at Portable Solar LLC discretion. Sol-Ark does not warrant or guarantee workmanship performed by any person or firm installing its Products. This warranty does not cover the costs of installation, removal, shipping (except as described below), or reinstallation of Products or parts of Products. LCD screen and fans are covered for 5 years from date of purchase.

THIS LIMITED WARRANTY IS THE EXCLUSIVE WARRANTY APPLICABLE TO SOL-ARK (PORTABLE SOLAR LLC) PRODUCTS. SOL-ARK EXPRESSLY DISCLAIMS ANY OTHER EXPRESS OR IMPLIED WARRANTIES OF ITS PRODUCTS. SOL-ARK ALSO EXPRESSLY LIMITS ITS LIABILITY IN THE EVENT OF A PRODUCT DEFECT TO REPAIR OR REPLACEMENT IN ACCORDANCE WITH THE TERMS OF THIS LIMITED WARRANTY AND EXCLUDES ALL LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING WITHOUT LIMITATION ANY LIABILITY FOR PRODUCTS NOT BEING AVAILABLE FOR USE OR LOST REVENUES OR PROFITS, EVEN IF IT IS MADE AWARE OF SUCH POTENTIAL DAMAGES.

**Return Policy - No returns will be accepted without prior authorization** and must include the Return Material Authorization (RMA) number. Please call and talk to one of our engineers to obtain this number at 972-575-8875.

**Return Material Authorization (RMA) A request for an RMA number requires all of the following information:** 1. Product model and serial number; 2. Proof-of-purchase in the form of a copy of the original Product purchase invoice or receipt confirming the Product model number and serial number; 3. Description of the problem; 4. Validation of problem by Technical Support, and 5. Shipping address for the repaired or replacement equipment. Upon receiving this information, the Sol-Ark representative can issue an RMA number.

Any product that is returned must be brand new, in excellent condition, and packaged in the original manufacturer's carton with all corresponding hardware and documentation. Returns must be shipped with prepaid freight and insured via the carrier of your choice to arrive back at Portable Solar within 30 days of your initial delivery or pick-up. **Shipping charges will not be refunded.**

All returns are subject to a 35% restocking fee. **No returns will be accepted beyond 30 days of original delivery.** The value and cost of replacing any items missing (e.g. parts, manuals, etc.) will be deducted from the refund. If you have questions regarding our return policy, please email us at [sales@sol-ark.com](mailto:sales@sol-ark.com) or call us at the number above during regular (M-F) business hours.

**Sol-Ark 5K-1P-N Install Operational Verification Checklist Questionnaire must be filled out, signed, and dated to secure full warranty coverage.**